

Owner's Manual

HIDE-AWAY NAVIGATION SYSTEM
FOR TRUCKS/CAMPER VANS

AVIC-F130

HIDE-AWAY NAVIGATION SYSTEM

AVIC-F250

For details on software updates,
visit www.naviextras.com.

Declaration of Conformity with regard to the R&TTE Directive 1999/5/EC

Manufacturer:

PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

EU Representative's:

Pioneer Europe NV

Haven 1087, Keetberglaan 1,
B-9120 Melsele, Belgium/Belgique
<http://www.pioneer.eu>



[*] AVIC-F130, AVIC-F250

English:

Hereby, Pioneer, declares that this [*] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Suomi:

Pioneer vakuuttaa täten että [*] tyypinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Nederlands:

Hierbij verklaart Pioneer dat het toestel [*] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG

Français:

Par la présente Pioneer déclare que l'appareil [*] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE

Svenska:

Härmed intygar Pioneer att denna [*] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Dansk:

Undertegnede Pioneer erklærer herved, at følgende udstyr [*] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF

Deutsch:

Hiermit erklärt Pioneer, dass sich dieses Gerät [*] in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW i)

Ελληνικά:

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Pioneer ΔΗΛΩΝΕΙ ΟΤΙ [*] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ

Italiano:

Con la presente Pioneer dichiara che questo [*] è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Español:

Por medio de la presente Pioneer declara que el [*] cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE

Português:

Pioneer declara que este [*] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Čeština:

Pioneer tímto prohlašuje, že tento [*] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES

Eesti:

Käesolevaga kinnitab Pioneer seadme [*] vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Magyar:

Alulírott, Pioneer nyilatkozom, hogy a [*] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Latviešu valoda:

Ar šo Pioneer deklarē, ka [*] atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių kalba:

Šiuo Pioneer deklaruoją, kad šis [*] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Malti:

Hawnhekk, Pioneer jiddikjara li dan [*] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC

Slovenčina:

Pioneer týmto vyhlasuje, že [*] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Slovenščina:

Pioneer izjavlja, da je ta [*] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Română:

Prin prezenta, Pioneer declara ca acest [*] este in conformitate cu cerintele esentiale si alte prevederi ale Directivei 1999/5/EU.

Български:

С настоящето, Pioneer декларира, че този [*] отговаря на основните изисквания и други съответни постановления на Директива 1999/5/EC.

Polski:

Niniejszym Pioneer oświadcza, że [*] jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC

Norsk:

Pioneer erklærer herved at utstyret [*] er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Íslenska:

Hér með lýsir Pioneer yfir því að [*] er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC

Hrvatski:

Omime tvrtka Pioneer izjavlja da je ovaj [*] u skladu osnovnim zahtjevima i ostalim odredbama Direktive 1999/5/EC.

Thank you for buying this Pioneer product.

Please read through these instructions so you will know how to operate your model properly. *After you have finished reading the instructions, keep this document in a safe place for future reference.*



Important

- The screens shown in the examples may differ from actual screens. Actual screens may be changed without notice for performance and function improvements.
- The screen examples shown in this manual are the ones for AVIC-F130. If you use a different model, the screens that appear may differ from the examples in the manual.

01 Precaution

02 Introduction

- Licence agreement **7**
 - PIONEER AVIC-F130, AVIC-F250 **7**
 - END USER LICENSE AGREEMENT **9**
- About the data for the map database **11**
- Important safety information **11**
 - Fuel cost management **13**
 - Traffic information **13**
 - Speed limit indication **13**
 - Lorry navigation **13**
- Additional safety information **13**
 - To avoid battery exhaustion **13**
 - Handling the SD card slot **13**
- Notes before using the system **14**
 - In case of trouble **14**
 - Visit our website **14**
 - About this product **14**
- Checking part names and functions **15**
- Inserting an SD memory card **15**
- Resetting the microprocessor **16**

03 Before you start

- On first-time startup **17**
- Regular startup **18**

04 How to use the navigation menu screens

- Screen switching overview **19**
- What you can do on each menu **20**
- Operating list screens (e.g. route settings screen) **20**
- Operating the on-screen keyboard **20**
- Monitoring the GPS reception quality **21**

05 How to use the map

- How to read the map screen **22**
- Frequently shown route events **23**
- Seeing the current position on the map **23**
 - Checking the detailed information about the current position **24**
- Browsing the data field **25**
- Display during motorway driving **25**
- Operating the map screen **26**
 - Changing the scale of the map **26**
 - Smart Zoom **26**
 - Switching the map orientation **26**
 - Changing the view angle of the map **27**
 - Switching the map between 2D and 3D **27**
 - Scrolling the map to the position you want to see **28**
 - Viewing information about a specified location **28**

06 Searching for and selecting a location

- Searching for a location by address **29**
- Searching for a location by entering the midpoint of a street **30**
- Searching for a location by entering the city/town centre **30**
- Finding the location by specifying the postcode **30**
- Searching for Points of Interest (POI) **31**
 - Searching for POIs using "Quick Search" **31**

- Searching for POIs using preset categories **32**

Searching for POIs by categories **33**

Searching for a POI directly from the name of the facilities **34**

Searching for a nearby POI **35**

Selecting a location by using “Find on Map” **36**

Selecting destination from “Favourites” **36**

Selecting a location you searched for recently **37**

- Smart History **37**
- History **37**

Searching for a location by coordinates **37**

Searching for a location by scrolling the map **38**

07 After the location is decided

Setting a route to your destination **39**

- Setting a route using a searched location **39**
- Checking route alternatives when planning the route **39**
- Setting a route using the “My Route” menu **40**

08 Checking and modifying the current route

Displaying the route overview **42**

Checking route parameters and accessing route related functions **42**

Modifying the route calculation conditions **42**

- Changing the vehicle used **42**
- Setting the vehicle parameters **43**
- Setting the route calculation **45**
- Changing road types used **45**

Setting the waiting time at waypoints **46**

Setting driving time alerts **47**

Modifying the route **48**

- Selecting a new destination when already having a route **48**
- Setting a new starting position for the route **48**

Editing the list of destinations **49**

Cancelling the current route guidance **49**

Checking route alternatives for the current route **50**

Watching the simulation of the route **50**

Navigating in off-road mode **51**

09 Registering and editing locations

Storing a location in “Favourites” **52**

Saving a location as an alert point **52**

Editing an alert point **53**

10 Using traffic information

Checking historical traffic information **54**

Receiving real-time traffic information (TMC) **54**

- Checking the traffic incidents on the map **55**

11 Customising preferences

Displaying the settings screen **56**

Setting the volume and the guidance voice for navigation system **56**

Customising the quick menu **57**

Setting the traffic information **58**

Setting the user profiles **59**

Customising the map screen settings **59**

Setting the visual guidance **60**

Customising the display settings **61**

Customising the regional settings **62**

Setting the Trip Monitor **62**

Starting the configuration wizard **62**

Resetting to the default settings **63**

12 Other operations

More menu **64**

13 Installation

- Important safeguards **65**
- Precautions before connecting the system **65**
- Before installing this product **66**
- To prevent damage **66**
- Precautions before installation **67**
- Connecting the system **68**
- Installing with the hook and loop fastener **69**

Appendix

- Positioning technology **70**
 - Positioning by GPS **70**
- Handling large errors **70**
 - When positioning by GPS is impossible **70**
 - Conditions likely to cause noticeable positioning errors **70**
- Route setting information **72**
 - Route search specifications **72**
- SD and SDHC logo **73**
- Display information **74**
- Glossary **74**
- Specifications **75**

Certain country and government laws may prohibit or restrict the placement and use of this system in your vehicle. Please comply with all applicable laws and regulations regarding the use, installation and operation of your navigation system.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

Introduction

Licence agreement

PIONEER AVIC-F130, AVIC-F250

THIS IS A LEGAL AGREEMENT BETWEEN YOU, AS THE END USER, AND PIONEER CORP. (JAPAN) ("PIONEER"). PLEASE READ THE TERMS AND CONDITIONS OF THIS AGREEMENT CAREFULLY BEFORE USING THE SOFTWARE INSTALLED ON THE PIONEER PRODUCTS. BY USING THE SOFTWARE INSTALLED ON THE PIONEER PRODUCTS, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT. THE SOFTWARE INCLUDES A DATABASE LICENCED BY THIRD PARTY SUPPLIER(S) ("SUPPLIERS"), AND YOUR USE OF THE DATABASE IS COVERED BY THE SUPPLIERS' SEPARATE TERMS, WHICH ARE ATTACHED TO THIS AGREEMENT (refer to page 9). IF YOU DO NOT AGREE WITH ALL OF THESE TERMS, PLEASE RETURN THE PIONEER PRODUCTS (INCLUDING THE SOFTWARE, AND ANY WRITTEN MATERIALS) WITHIN FIVE (5) DAYS OF RECEIPT OF THE PRODUCTS, TO THE AUTHORISED PIONEER DEALER FROM WHICH YOU PURCHASED THEM.

1 GRANT OF LICENCE

Pioneer grants to you a non-transferable, non-exclusive licence to use the software installed on the Pioneer products (the "Software") and the related documentation solely for your own personal use or for internal use by your business, only on such Pioneer products. You shall not copy, reverse engineer, translate, port, modify or make derivative works of the Software. You shall not loan, rent, disclose, publish, sell, assign, lease, sublicense, market or otherwise transfer the Software or use it in any manner not expressly authorised by this agreement. You shall not derive or attempt to derive the source code or structure of all or any portion of the Software by reverse engineering, disassembly, decompilation, or any other means. You shall not use the Software to operate a service bureau or for any other use

involving the processing of data for other persons or entities.

Pioneer and its licensor(s) shall retain all copyright, trade secret, patent and other proprietary ownership rights in the Software. The Software is copyrighted and may not be copied, even if modified or merged with other products. You shall not alter or remove any copyright notice or proprietary legend contained in or on the Software.

You may transfer all of your licence rights in the Software, the related documentation and a copy of this Licence Agreement to another party, provided that the party reads and agrees to accept the terms and conditions of this Licence Agreement.

2 DISCLAIMER OF WARRANTY

The Software and related documentation are provided to you "AS IS". PIONEER AND ITS LICENSOR(S) (for the purpose of provisions 2 and 3, Pioneer and its licensor(s) shall be collectively referred to as "Pioneer") MAKES AND YOU RECEIVE NO WARRANTY, WHETHER EXPRESS OR IMPLIED, AND ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. SOME COUNTRIES DO NOT ALLOW EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. The Software is complex and may contain some nonconformities, defects or errors. Pioneer does not warrant that the Software will meet your needs or expectations, that operation of the Software will be error free or uninterrupted, or that all nonconformities can or will be corrected. Furthermore, Pioneer does not make any representations or warranties regarding the use or results of the use of the Software in terms of its accuracy, reliability or otherwise.

3 LIMITATION OF LIABILITY

IN NO EVENT SHALL PIONEER BE LIABLE FOR ANY DAMAGES, CLAIM OR LOSS INCURRED BY YOU (INCLUDING, WITHOUT LIMITATION, COMPENSATORY, INCIDENTAL, INDIRECT, SPECIAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES, LOST PROFITS, LOST SALES OR BUSINESS, EXPENDITURES, INVESTMENTS, OR COMMITMENTS IN CONNECTION WITH ANY BUSINESS, LOSS OF ANY GOODWILL, OR DAMAGES) RESULTING FROM THE USE OF OR INABILITY TO USE THE SOFTWARE, EVEN IF PIONEER HAS BEEN INFORMED OF, KNEW OF, OR SHOULD HAVE KNOWN OF THE LIKELIHOOD OF SUCH DAMAGES. THIS LIMITATION APPLIES TO ALL CAUSES OF ACTION IN THE AGGREGATE, INCLUDING WITHOUT LIMITATION BREACH OF CONTRACT, BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY, MISREPRESENTATION, AND OTHER TORTS. IF PIONEER'S WARRANTY DISCLAIMER OR LIMITATION OF LIABILITY SET FORTH IN THIS AGREEMENT SHALL OR FOR ANY REASON WHATSOEVER BE HELD UNENFORCEABLE OR INAPPLICABLE, YOU AGREE THAT PIONEER'S LIABILITY SHALL NOT EXCEED FIFTY PERCENT (50 %) OF THE PRICE PAID BY YOU FOR THE ENCLOSED PIONEER PRODUCT.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty disclaimer and limitation of liability shall not be applicable to the extent that any provision of this warranty is prohibited by any country or local law which cannot be pre-empted.

4 EXPORT LAW ASSURANCES

You agree and certify that neither the Software nor any other technical data received from Pioneer, nor the direct product thereof, will be exported outside the country or district (the "Country") governed by the government having jurisdiction over you (the "Government") except as authorised and as permitted by the

laws and regulations of the Government. If the Software has been rightfully obtained by you outside of the Country, you agree that you will not re-export the Software nor any other technical data received from Pioneer, nor the direct product thereof, except as permitted by the laws and regulations of the Government and the laws and regulations of the jurisdiction in which you obtained the Software.

5 TERMINATION

This Agreement is effective until terminated. You may terminate it at any time by destroying the Software. The Agreement also will terminate if you do not comply with any terms or conditions of this Agreement. Upon such termination, you agree to destroy the Software.

6 MISCELLANEOUS

This is the entire Agreement between Pioneer and you regarding its subject matter. No change in this Agreement shall be effective unless agreed to in writing by Pioneer. If any provision of this Agreement is declared invalid or unenforceable, the remaining provisions of this Agreement shall remain in full force and effect.

END USER LICENSE AGREEMENT

PLEASE READ THIS END USER LICENSE AGREEMENT CAREFUL BEFORE USING THE NAVTEQ DATABASE

• NOTICE TO THE USER

THIS IS A LICENSE AGREEMENT - AND NOT AN AGREEMENT FOR SALE - BETWEEN YOU AND NAVTEQ B.V. FOR YOUR COPY OF THE NAVTEQ NAVIGABLE MAP DATABASE, INCLUDING ASSOCIATED COMPUTER SOFTWARE, MEDIA AND EXPLANATORY PRINTED DOCUMENTATION PUBLISHED BY NAVTEQ (JOINTLY "THE DATABASE"). BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT ("AGREEMENT"). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE DATABASE, ALONG WITH ALL OTHER ACCOMPANYING ITEMS, TO YOUR SUPPLIER FOR A REFUND.

• OWNERSHIP

The Database and the copyrights and intellectual property or neighboring rights therein are owned by NAVTEQ or its licensors. Ownership of the media on which the Database is contained is retained by NAVTEQ and/or your supplier until after you have paid in full any amounts due to NAVTEQ and/or your supplier pursuant to this Agreement or similar agreement(s) under which goods are provided to you.

• LICENSE GRANT

NAVTEQ grants you a non-exclusive license to use the Database for your personal use or, if applicable, for use in your business' internal operations. This license does not include the right to grant sub-licenses.

• LIMITATIONS ON USE

The Database is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws (e.g. national laws based on the European Software Directive (91/250) and the Database Directive (96/9)), you may not extract or reutilize substantial parts of the contents of the Database nor reproduce, copy, modify, adapt, translate, disassemble, decompile, reverse engineer

any portion of the Database. If you wish to obtain interoperability information as meant in (the national laws based on) the European Software Directive, you shall grant NAVTEQ reasonable opportunity to provide said information on reasonable terms, including costs, to be determined by NAVTEQ.

• TRANSFER OF LICENSE

You may not transfer the Database to third parties, except when installed in the system for which it was created or when you do not retain any copy of the Database, and provided that the transferee agrees to all terms and conditions of this Agreement and confirms this in writing to NAVTEQ. Multi-disc sets may only be transferred or sold as a complete set as provided by NAVTEQ and not as subset thereof.

• LIMITED WARRANTY

NAVTEQ warrants that, subject to the warnings set out below, for a period of 12 months after acquisition of your copy of the Database, it will perform substantially in accordance with NAVTEQ's Criteria for Accuracy and Completeness existing on the date you acquired the Database; these criteria are available from NAVTEQ at your request. If the Database does not perform in accordance with this limited warranty, NAVTEQ will use reasonable efforts to repair or replace your non-conforming copy of the Database. If these efforts do not lead to performance of the Database in accordance with the warranties set out herein, you will have the option to either receive a reasonable refund of the price you paid for the Database or to rescind this Agreement. This shall be NAVTEQ's entire liability and your sole remedy against NAVTEQ. Except as expressly provided in this section, NAVTEQ does not warrant nor make any representations regarding the use of results of the use of the Database in terms of its correctness, accuracy, reliability, or otherwise. NAVTEQ does not warrant that the Database is or will be error free. No oral or written information or advice provided by NAVTEQ, your supplier or any other person shall create a warranty or in any way increase the scope of the limited warranty described above. The limited warranty set forth in this Agreement does not affect or prejudice any statutory legal rights that you may have under the

legal warranty against hidden defects. If you did not acquire the Database from NAVTEQ directly, you may have statutory rights against the person from whom you have acquired the Database in addition to the rights granted by NAVTEQ hereunder according to the law of your jurisdiction. The above warranty of NAVTEQ shall not affect such statutory rights and you may assert such rights in addition to the warranty rights granted herein.

LIMITATION OF LIABILITY

The price of the Database does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the Database. Accordingly, in no event shall NAVTEQ be liable for any consequential or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the Database, whether in an action in contract or tort or based on a warranty, even if NAVTEQ has been advised of the possibility of such damages. In any event NAVTEQ's liability for direct damages is limited to the price of your copy of the Database.

THE LIMITED WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

WARNINGS

The Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results. The Database does not include or reflect information on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNING LAW

This Agreement shall be governed by the laws of the jurisdiction, in which you reside at the date of acquisition of the Database. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Database shall apply. In all other cases, or if the jurisdiction where you acquired the Database cannot be defined, the laws of the Netherlands shall apply. The courts competent at your place of residence at the time you acquired the Database shall have jurisdiction over any dispute arising out of, or relating to this Agreement, without prejudice to NAVTEQ's right to bring claims at your then current place of residence.



Introduction

About the data for the map database

- Modifications related to roads, streets/highways, terrain, construction and other things before/during the development period may not be reflected in this database. Inevitably, those modifications after that period are not reflected in this database.
- Regardless of existing and newly-built things, the data may be different from the actual condition.
- For details about the map coverage of this navigation system, refer to the information on our website.
- It is strictly prohibited to reproduce and use any part or the whole of this map in any form without permission from the copyright owner.
- If the local traffic regulations or conditions deviate from this data, follow the local traffic regulations (such as signs, indications, etc.) and conditions (such as construction, weather, etc.).
- The traffic regulation data used in the map database applies only to standard sized passenger vehicles. Note that regulations for larger vehicles, motorbikes, and other non-standard vehicles are not included in the database.
- © 1993-2012 NAVTEQ. All rights reserved.



NAVTEQ Maps is a trademark of NAVTEQ.

- For copyright of contents, please check the **About** window in the software.
- ➡ For details, refer to *More menu* on page 64. □

Important safety information



WARNING

- Do not attempt to install or service your navigation system by yourself. Installation or servicing of the navigation system by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards.
- If liquid or foreign matter should get inside this navigation system, park your vehicle to safe place and turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorised Pioneer Service Station. Do not use the navigation system in this condition because doing so may result in a fire, electric shock, or other failure.
- If you notice smoke, a strange noise or odour from the navigation system, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorised Pioneer Service Station. Using this navigation system in this condition may result in permanent damage to the system.
- Do not disassemble or modify this navigation system, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorised Pioneer Service Station for internal inspection, adjustments or repairs.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.

CAUTION

When a route is calculated, the route and voice guidance for the route are automatically set. Also, for day or time traffic regulations, only information about traffic regulations applicable at the time when the route was calculated is considered. One-way streets and street closures may not be taken into consideration. For example, if a street is open during the morning only, but you arrive later, it would be against the traffic regulations so you cannot drive along the set route. When driving, please follow the actual traffic signs. Also, the system may not know some traffic regulations.

Before using your navigation system, be sure to read and fully understand the following safety information:

- Read the entire manual before operating this navigation system.
 - This navigation system may in certain circumstances display inaccurate position of your vehicle, the distance of objects shown on the screen, and compass directions. In addition, the system has certain limitations, including the inability to identify one-way streets, temporary traffic restrictions and potentially unsafe driving areas. Please exercise your own judgement in the light of actual driving conditions.
 - The navigation features of your navigation system (and rear view camera option if purchased) are intended solely as an aid to you in the operation of your vehicle. It is not a substitute for your attentiveness, judgement, and care when driving.
 - Certain country and government laws may prohibit or restrict the placement and use of this system in your vehicle. Please comply with all applicable laws and regulations regarding the use, installation and operation of your navigation system.
 - Do not operate this navigation system (or the rear view camera option if purchased) if doing so will divert your attention in any way from the safe operation of your vehicle.
- Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and apply the handbrake before making the necessary adjustments.
- Never allow others to use the system unless they have read and understood the operating instructions.
 - Never use this navigation system to route to hospitals, police stations or similar facilities in an emergency. Stop using any functions relating to the hands-free phoning and please call the appropriate emergency number.
 - Route and guidance information displayed by this equipment is for reference purposes only. It may not accurately reflect the latest permissible routes, road conditions, one way streets, road closures, or traffic restrictions.
 - Traffic restrictions and advisories currently in force should always take precedence over guidance given by the navigation system. Always obey current traffic restrictions, even if the navigation system provides contrary advice.
 - Failure to set correct information about the local time may result in the navigation system providing improper routing and guidance instructions.
 - Never set the volume of your navigation system so high that you cannot hear outside traffic and emergency vehicles.
 - The data encoded in the built-in memory is the intellectual property of the provider, and the provider is responsible for such content.
 - Keep this manual handy as a reference for operating procedures and safety information.
 - Pay close attention to all warnings in this manual and follow the instructions carefully.

Introduction

- Please remember to wear your seat belt at all times while operating your vehicle. If you are in an accident, your injuries can be considerably more severe if your seat belt is not properly fastened.
- Never use headphones while driving.

Fuel cost management

These calculations are based only on the information that you provide and not on any data from the vehicle. The fuel mileage displayed is only a reference value, and does not guarantee the fuel mileage displayed can be obtained.

Traffic information

- Pioneer does not bear responsibility for the accuracy of the information transmitted.
- Pioneer does not bear responsibility for changes to information services provided by broadcasting stations or by related companies, such as cancellation of services or changing to pay-services. Also, we do not accept return of the product for this reason.

Speed limit indication

The speed limit is based on the map database. The speed limit in the database may not match the actual speed limit of the current road. This is not a definite value. Be sure to drive according to the actual speed limit.

Lorry navigation

- ❑ This function is available for AVIC-F130 only.
- Based on the dimensions and other entered parameters of your vehicle, this system warns you when you are approaching a restricted road segment or such roads must be used in your route.
- Warnings are both visual and audible. There are different kinds of warnings:

- When approaching a restricted road segment without a route, you are warned that there is a restricted area ahead.
- Restricted road segments are excluded from your routes but in some cases some restricted roads need to be used to reach the given destination. In this case you receive a warning and you must accept that you have restricted roads in your route or you can stop the navigation and continue without an active route.

- ❑ Please note that lorry navigation is only as accurate and comprehensive as the restrictions received with the map. Restrictions may not cover lower priority roads and in most cases the coverage changes as you move around your map region. You are obliged to always obey the restrictions displayed on the road. ▣

Additional safety information

To avoid battery exhaustion

Be sure to run the vehicle engine while using this product. Using this product without running the engine can drain the battery.



WARNING

Do not install this product in a vehicle that does not have an ACC wire or circuitry available.

Handling the SD card slot

The SD memory card and SDHC memory card are collectively referred to as the "SD memory card".



CAUTION

- Keep the SD memory card out of the reach of small children to prevent them from accidentally swallowing it.

- Ejecting an SD memory card during data transfer can damage the SD memory card. Be sure to eject the SD memory card by the procedure described in this manual.
- To prevent data loss and damage to the storage device, never remove it from this navigation system while data is being transferred.
- If data loss or corruption occurs on the storage device for any reason, it is usually not possible to recover the data. Pioneer accepts no liability for damages, costs or expenses arising from data loss or corruption.
- Never insert or eject an SD memory card while driving.
- Do not insert anything other than SD memory cards. ■

The names of private corporations, products and other entities described herein are the registered trademarks or trademarks of their respective firms.



Notes before using the system

In case of trouble

Should the navigation system fail to operate properly, contact your dealer or nearest authorised Pioneer Service Station.

Visit our website

Visit us at the following site:

<http://www.pioneer.eu>


- Register your product. We will keep the details of your purchase on file to help you refer to this information in the event of an insurance claim such as loss or theft.
- We offer the latest information about PIONEER CORPORATION on our website.

About this product

This navigation system does not work correctly in areas other than Europe. The RDS (Radio Data System) function operates only in areas with FM stations broadcasting RDS signals. The RDS-TMC service can also be used in the area where there is a station that broadcasts the RDS-TMC signal.

Introduction

Checking part names and functions

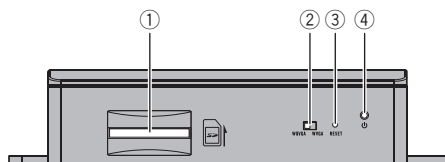

① SD card slot

- ❑ An SD memory card containing map data is inserted at the factory.
- ❑ Do not erase the map data stored on the SD memory card (inserted at the factory). Without the data, the navigation function is disabled.

② Video output selector switch

The switch is used to change the resolution of video output to the AV receiver.

- When the switch is set to the left, WQVGA video is output.
- When the switch is set to the right, WVGA video is output.

③ Reset button


- ➡ For details, refer to *Resetting the micro-processor* on the next page.

④ Power indicator ■

Inserting an SD memory card

- ❑ The included SD memory card must be inserted into the SD card slot for prior to using the AVIC-F130 or AVIC-F250 for the first time.

1 Insert an SD memory card into the SD card slot.

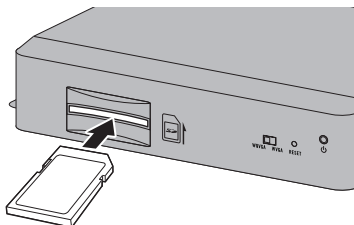

2 Gently press the card in against the spring latch until it stops, then release.

The card will lock firmly into place inside the SD card slot. ■

Resetting the microprocessor




CAUTION

Please refer to the related section before clearing.

The microprocessor must be reset under the following conditions:

- Prior to using this product for the first time after installation.
- If the product fails to operate properly.
- If there appear to be problems with the operation of the system.
- When changing the combination of equipment.
- When adding/removing additional products that connect to the navigation system.
- If your vehicle position is shown on the map with a significant positioning error.

● **Press the reset button on this product with a pointed object such as the tip of a pen.**

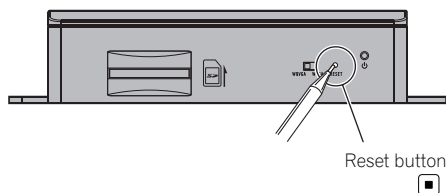

Before you start

On first-time startup

When you use the navigation system for the first time, an initial setup process starts automatically. Follow the steps below.

1 Start the engine to boot up the system.


2 Wait approximately 10 seconds, and then press the **MODE** button of the AV receiver.

After a short pause, the navigation splash screen appears.

3 Set the video output selector switch according to your AV receiver.

- ❑ If the screen remains black after pressing the **MODE** button of the AV receiver, set the switch to the other side.
- ➔ For details, refer to *Checking part names and functions* on page 15.


4 Select the language that you want to use on the screen, then touch **[Done]**.

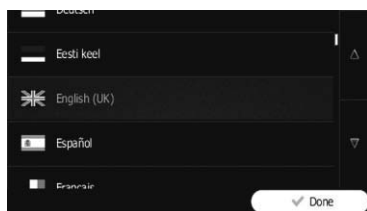

- ❑ Later you can change it in "**Regional**" settings.
- ➔ For details, refer to *Customising the regional settings* on page 62.

The navigation system will restart and the "**End User Licence Agreement**" screen is displayed.


5 Read the disclaimer carefully, checking its details, and then touch **[Accept]** if you agree to the conditions.

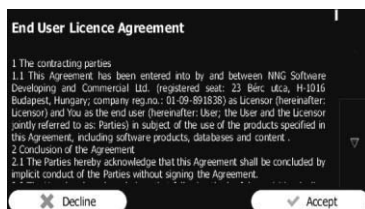

The configuration wizard starts.


6 Touch **[Next]** to continue.

7 Select the language that you want to use for voice guidance messages, then touch **[Next]**.

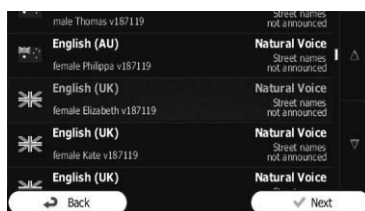


- ❑ Later you can change it in "**Sound and Warnings**" settings.
- ➔ For details, refer to *Setting the volume and the guidance voice for navigation system* on page 56.

8 If needed, modify the time format and unit settings, then touch **[Next]**.

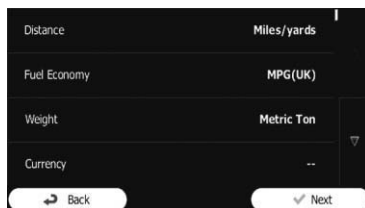

- ❑ Later you can change it in "**Regional**" settings.
- ➔ For details, refer to *Customising the regional settings* on page 62.


9 If needed, modify the default route planning options, then touch [Next].

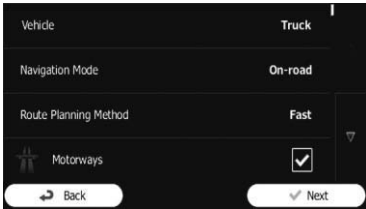

- ❑ Later you can change them in “**Route Settings**”.
- ➡ For details, refer to *Modifying the route calculation conditions* on page 42.
- ❑ You can restart the configuration wizard later from the “**Settings**” menu.
- ➡ For details, refer to *Starting the configuration wizard* on page 62.

10 Touch [Finish].

The initial setup is now complete. After touching [Finish], the “**Navigation Menu**” screen appears and you can start using the navigation system.

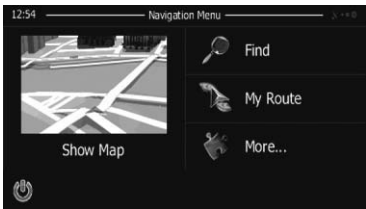

Regular startup

1 Start the engine to boot up the system.

2 Press the **MODE** button of the AV receiver.


After a short pause, the navigation screen appears.

- ❑ The display will turn off if you press the **MODE** button of the AV receiver immediately after the navigation system restarts, so wait (approximately 10 seconds) after restart before pressing the **MODE** button. ❑

How to use the navigation menu screens


Screen switching overview

Navigation screen

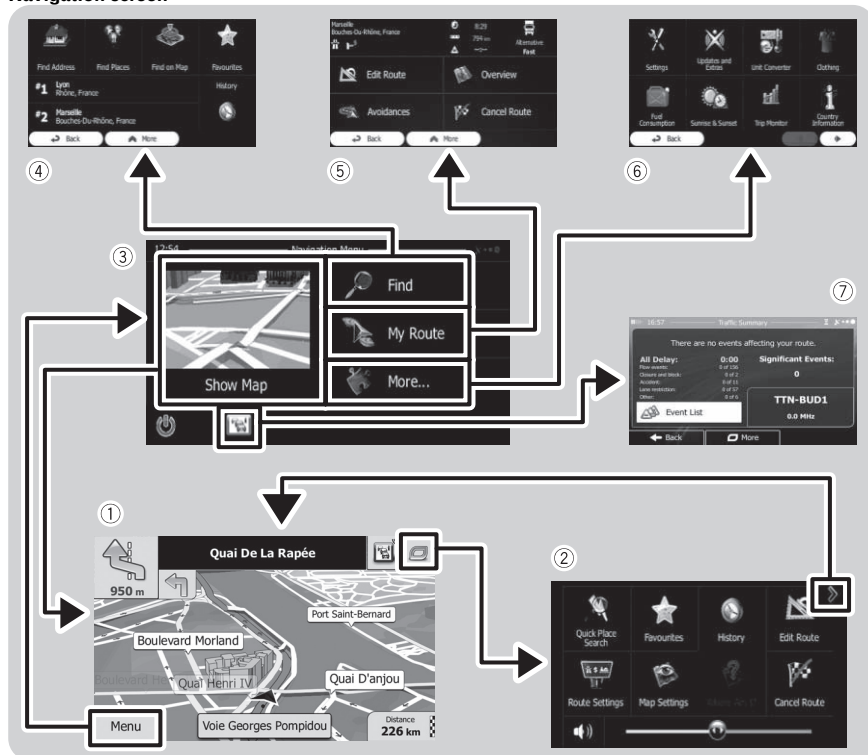

MODE

Press the **MODE** button of the AV receiver.

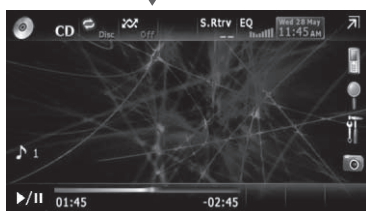

AV receiver screen (e.g. AVH-P4300DVD)

What you can do on each menu


- ① **Map screen**
Touch **[Show Map]** on the “**Navigation Menu**” screen.
- ② **Quick menu**
Registering your favourite menu items in shortcuts allows you to quickly jump to the registered menu screen by a simple touch on the quick menu screen. The master volume slider at the bottom of the screen adjusts the sound volume of the device. All sounds of this system are affected.
 - ❑ You can customise the menu options.
 - ➡ For details, refer to *Customising the quick menu* on page 57.
- ③ **“Navigation Menu” screen**
Touch **[Menu]** on the map screen to display the “**Navigation Menu**” screen. This is the starting menu to access the desired screens and operate the various functions.
- ④ **“Find” menu**
You can search for your destination on this menu. Other features include useful functions to support your navigation.
- ⑤ **“My Route” menu**
You can display your route information on the map. You can also perform route-related actions such as editing or cancelling your route on this menu.
- ⑥ **“More...” menu**
You can customise the way the navigation system works, to simulate demo routes or to run some additional applications.
- ⑦ **Traffic summary screen**
You can check the summary of traffic events on the set route. ❑

Operating list screens (e.g. route settings screen)



- ① **Listed items**
Touching an item on the list allows you to narrow down the options and proceed to the next operation.
- ② **Back**
The previous screen returns. Touching and holding **[Back]** returns to the map screen.
- ③ Touching ▼ or ▲ on the right of screen allows you to see the next or previous page. ❑

Operating the on-screen keyboard

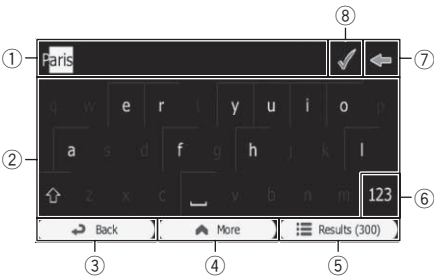

- ① **Text box**
Displays the characters that are entered.
- ② **Keyboard**
Touch the keys to enter the characters.
 - ❑ To enter a space, touch [] at the bottom centre of the screen.

How to use the navigation menu screens

- ❑ When entering a text, the first character appears in upper case while the rest of the text is in lower case. Touch  to enter an upper case letter or touch twice to turn on Caps Lock. Touch again and lower case letters return.
- ③ **Back**
The previous screen returns. Touching and holding **[Back]** returns to the map screen.
- ④ **More**
Touching **[More]** switches to another keyboard layout, for example from an English keyboard to a Greek keyboard.
- ⑤ **Results**
Touch to finalise the keyboard entry (open the list of search results).
If the desired name does not show up, the names that match the string appear in a list after entering a couple of characters (to open the list of results before it appears automatically, touch **[Results]**).
- ⑥ 
Touch to switch to a keyboard offering numeric and symbol characters.
- ⑦ 
Touch to correct your entry on the keyboard.
Touching and holding  deletes several characters or the entire input string.
- ⑧ 
Touch to finalise the keyboard entry (accept the suggested search result). 

Monitoring the GPS reception quality


In the top right corner, the GPS reception quality icon shows the current accuracy of the position information.

Indicator	Meaning
	GPS navigation possible
	Insufficient GPS navigation
	GPS navigation not possible
	No connection to GPS receiver



Most of the information provided by your navigation system can be seen on the map. You need to become familiar with how information appears on the map.

How to read the map screen

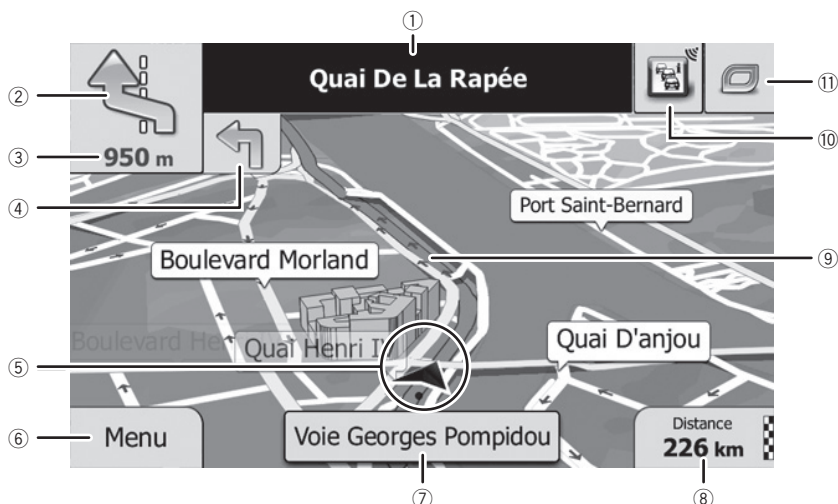

❑ Information with an asterisk (*) appears only when the route is set.

❑ Depending on the conditions and settings, some items may not be displayed.

① **Name of the street to be used (or next guidance point)***

Shows information about the next guidance point (manoeuvre) and the next street or the next city/town.

② **Next guidance point (manoeuvre)***

When you approach the next manoeuvre, this appears in orange. Both the type of the event (turn, roundabout, exiting motorway, etc.) and its distance from the current position are displayed. A smaller icon shows the type of the second next manoeuvre if it is near the first one.

➞ For details, refer to *Frequently shown route events* on the next page.

③ **Distance to the next guidance point (manoeuvre)***

Shows the distance to the next manoeuvre.

④ **Second manoeuvre arrow***

Shows the turning direction after next guidance point and the distance to there.

⑤ **Current position**

Indicates the current location of your vehicle. The apex of the triangular mark indicates your orientation and the display moves automatically as you drive.

❑ The exact location of the arrow mark depends on the vehicle type used for route calculation and the navigation mode.

➞ For details, refer to *Changing the vehicle used* on page 42.

⑥ **Menu key**

Touch [Menu] to return to the "Navigation Menu" screen.

➞ For details, refer to *What you can do on each menu* on page 20.

⑦ **Street name (or city name) that your vehicle is travelling along**

⑧ **Data field**

How to use the map

Touching this field displays route information during navigation. By default, only one data field is displayed. Touch this field to see all data fields.

➔ For details, refer to *Browsing the data field* on page 25.

⑨ Current route*

The route currently set is highlighted in colour on the map.

➔ For details of the POI icons, refer to *Customising the map screen settings* on page 59.

⑩ Traffic information

The recommended route is not always the same between two points. Whenever suitable data exists, traffic information can be taken into account in the route calculation.

⑪ Quick menu

Touching this key causes the quick menu to appear.

➔ For details, refer to *Quick menu* on page 20. 

Frequently shown route events

Icon	Description
	Turn left.
	Turn right.
	Turn back.
	Bear right.
	Turn sharp left.

Icon	Description
	Keep left.
	Continue straight in the intersection.
	Go left on the roundabout, 3rd exit (next manoeuvre).
	Enter roundabout (second next manoeuvre).
	Enter motorway.
	Exit motorway.
	Board ferry.
	Leave ferry.
	Approaching a waypoint.
	Approaching the destination.



Seeing the current position on the map

1 Display the "Navigation Menu" screen.

➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Show Map] on the “Navigation Menu” screen.


The map screen appears showing the current position (a blue arrow by default), recommended route (an orange line) and surrounding map area.

- ❑ The arrow mark appears in blue by default. You can change this icon.
- ➔ For details of the POI icons, refer to *Customising the map screen settings* on page 59.

When there is no GPS position, the arrow mark is transparent. It shows your last known position. The more green dots you see in a satellite symbol in the top left corner, the closer you are to get the valid GPS position.



When GPS position is available, the arrow mark is displayed in full colour, now showing your current position.

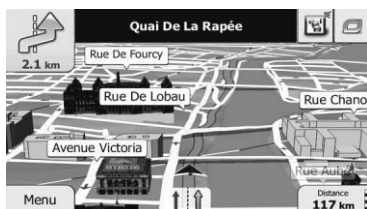

Checking the detailed information about the current position

You can get the detailed information about the current position (or about the last known position if GPS reception is not available) from the “Where Am I?” screen. You can also search for useful Points Of Interest (POI) nearby on the screen. Follow the steps below to open the “Where Am I?” screen.



1 Display the map screen.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 If the current street is displayed below the arrow mark (current position), touch it to open the “Where Am I?” screen.

- Touch  in the top right corner of the screen to open the quick menu screen, then touch [Where Am I?].

The screen provides the following information:


- Latitude and longitude (coordinate of the current position in WGS84 format)
- Altitude (elevation information coming from the GPS receiver – often inaccurate)
- House number on the left
- House number on the right
- Position information (current or last known)/time left since it was last updated
- Address details of the current position (when available)
 - ❑ To save the current position as a “Favourites” destination, touch [More].
 - ➔ For details, refer to *Storing a location in “Favourites”* on page 52.
- ❑ You can also search for assistance near your current position.
- ➔ For details, refer to *Searching for a nearby POI* on page 35. 

How to use the map


Browsing the data field

The data fields are different when you are navigating the current route and when you have no specified destination (the orange line is not displayed). The data field provides the following information.

- When the route is set:
Distance to final destination, time needed to reach the final destination and estimated arrival time

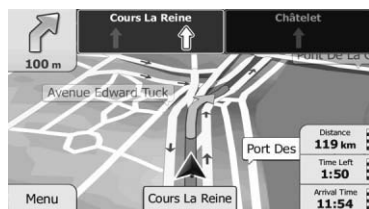

- When the route is not set:
Current speed, speed limit of the current road and current time

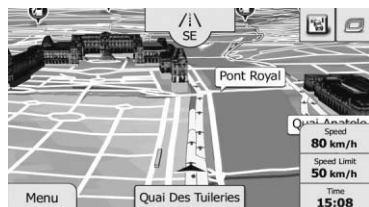


- ☐ The estimated time of arrival is an ideal value calculated based on the value set for **"Max. Speed"** and the actual driving speed. The estimated time of arrival is only a reference value, and does not guarantee arrival at that time.
 - ➡ For details, refer to *Setting the vehicle parameters* on page 43.
- ☐ You can change the value by touching and holding any of the fields. ☐

Display during motorway driving

In certain locations of the motorway, lane information is available, indicating the recommended lane to be in to easily manoeuvre the next guidance.

Lane information

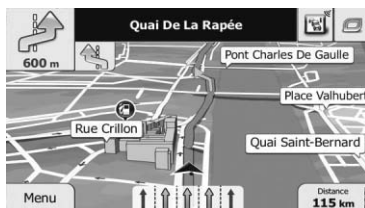

While driving on the motorway, motorway exit numbers and motorway signs may be displayed in the vicinity of interchanges and exits.

If you are approaching a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction.

Signposts



Junction view



- ☐ If the data for these items is not contained in the map data, the information is not available even if there are signs on the actual road.

An icon showing a petrol station or a restaurant will appear on the map during you are driving on motorways. Touch the icon to open the details of the next few exits or service stations.

Motorway exit services



- ❑ You can add any of them as a waypoint to your route.
- ➔ For details, refer to *Setting a route using the "My Route" menu* on page 40.
- ❑ If you want to display other types of POIs for the exits, you can change the icons in **"Visual Guidance Settings"**.
- ➔ For details, refer to *Setting the visual guidance* on page 60. ■

Operating the map screen

Changing the scale of the map

You can change how much of the map is displayed on the screen with street names and other text displayed in the same font size.

1 Display the map screen.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch anywhere on the map during navigation.

The map stops following the current position and control keys appear.

3 Touch or to change the map scale.



- ❑ Map scaling has a limit in 3D map view mode. If you zoom out further, the map switches to 2D view mode.
- ➔ For details, refer to *Switching the map between 2D and 3D* on the next page.

4 Touch [Back] to move the map back to follow the current GPS position.

Smart Zoom

Your navigation system features "Smart Zoom" that works in two ways:

- When the route is set:
 - When approaching a turn, it will zoom in and raise the view angle to let you easily recognise your manoeuvre at the next junction. If the next turn is at a distance, it will zoom out and lower the view angle to be flat so you can see the road in front of you.
- When the route is not set:
 - "Smart Zoom" will zoom in if you drive slowly and zoom out when you drive at high speed.

Switching the map orientation

You can switch how the map shows your vehicle's direction between "Heading up" and "North up".

- Heading up:
 - The map display always shows the vehicle's direction as proceeding toward the top of the screen.
- North up:
 - The map display always has north at the top of the screen.

How to use the map

- ❑ The map orientation is fixed at “Heading up” when the 3D map screen is displayed.

1 Display the map screen.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch anywhere on the map during navigation.

The map stops following the current position and control keys appear.

3 Touch to switch the map orientation.



Each time you touch the key changes the setting.

4 Touch [Back] to move the map back to follow the current GPS position.

Changing the view angle of the map

You can change the view angle of the map horizontally or vertically.

- ❑ You can change the vertical view angle of the map in 3D mode only.
- For details, refer to *Switching the map between 2D and 3D* on this page.

1 Display the map screen.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch anywhere on the map during navigation.

The map stops following the current position and control keys appear.

3 Touch / to tilt up/down or / to rotate left/right.

- ❑ Touching the key once modifies the view in large steps and touching and holding the key modifies it continuously and smoothly.

4 Touch [Back] to move the map back to follow the current GPS position.

Switching the map between 2D and 3D

1 Display the map screen.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch anywhere on the map during navigation.

The map stops following the current position and control keys appear.

3 Touch or to switch between 2D and 3D view modes.



Each time you touch the key changes the setting.

- ❑ When the 2D map screen is selected,  is displayed.
- ❑ When the 3D map screen is selected,  is displayed.

4 Touch [Back] to move the map back to follow the current GPS position.

Scrolling the map to the position you want to see

1 Display the map screen.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch and drag the map in the desired direction to scroll.

- ❑ Positioning the cursor to the desired location results in a brief information overview about the location being displayed at the top of the screen, with street name and other information for this location being shown.
- ❑ The scrolling increment depends on your dragging length.

3 Touch [Back] to move the map back to follow the current GPS position.

Viewing information about a specified location

An icon appears at registered places such as “**Favourites**” entries and places where there is a POI icon or traffic information icon. Place the cursor over the icon to view detailed information.

1 Scroll the map and move the scroll cursor to the icon you want to view.

2 Touch to see the details of the selected location.

3 Touch the item that you want to check the detailed information.

- Touch [Back] to return to the map.
 - ➔ For details of the POI icons, refer to *Customising the map screen settings* on page 59.
 - ➔ For details of the traffic information icons, refer to *Setting the traffic information* on page 58. 

Searching for and selecting a location

- ❑ Some information regarding traffic regulations depends on the time when the route calculation is performed. Thus, the information may not correspond with a certain traffic regulation when your vehicle actually passes through the location in question. Also, the information on the traffic regulations provided will be for a passenger vehicle, and not for a truck or other delivery vehicles. Always follow the actual traffic regulations when driving.

Searching for a location by address

The most frequently used function is “**Find Address**”, in which the address is specified and the location is searched.

- ❑ Depending on the search results, some steps may be skipped.

1 Touch [Menu] on the map screen.


The “**Navigation Menu**” screen appears.

- ➡ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Address].

3 Touch [Country], enter the first few letters of the country on the keyboard and then select one country from the list of results.

By default, your navigation system proposes the country and city/town where you are. If no changes are required, skip steps 3 and 4.

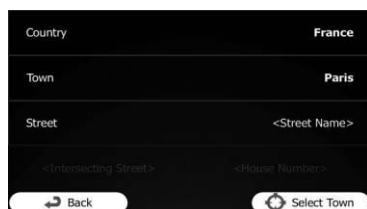

4 Touch [Town] and enter the name of the city/town on the keyboard.




5 Touch [Street] and enter the street name on the keyboard.



6 Touch [House Number] and enter the house number on the keyboard.

- ❑ To enter letters, touch **QWE**.

7 When the entry is complete, touch [Done].

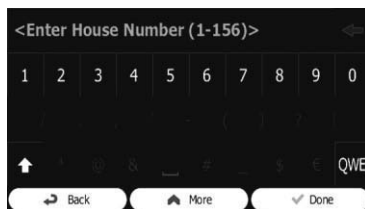

- ❑ If the entered house number cannot be found, the midpoint of the street is selected as the destination.

The searched location appears on the map screen.

- ➡ For the subsequent operations, refer to *Setting a route to your destination* on page 39. ■

Searching for a location by entering the midpoint of a street

You can also navigate to the midpoint of a street if the house number is not available.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Address].

3 If necessary, modify the country.

- For details of the operations, refer to *Searching for a location by address* on the previous page.

4 Touch [Street] and enter the street name on the keyboard.



5 Touch [Select Street].

The map screen appears with the selected point in the middle. The midpoint of the street is selected as the destination.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39. ■

Searching for a location by entering the city/town centre

You can search for a location by entering the city/town centre.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Address].

3 If necessary, modify the country.

- For details of the operations, refer to *Searching for a location by address* on the previous page.

4 Touch [Town] and enter the name of the city/town on the keyboard.



5 Touch [Select Town].

The map screen appears with the selected point in the middle. The centre of the displayed city/town becomes the destination of the route.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39. ■

Finding the location by specifying the postcode

If you know the postcode of the location that you want to find, you can use it to find the location.

- Depending on the search results, some steps may be skipped.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Address].

Searching for and selecting a location

3 If necessary, modify the country.

- For details of the operations, refer to *Searching for a location by address* on page 29.

4 Touch [Town] and enter the name of the city/town using its postcode.



- ☐ To open the numeric keypad, touch **123**.

5 Touch [Street] and enter the street name on the keyboard.



6 Touch [House Number] and enter the house number on the keyboard.

- ☐ To enter letters, touch **QWE**.

7 When the entry is complete, touch [Done].

- ☐ If the entered house number cannot be found, the midpoint of the street is selected as the destination.



The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39.

Searching for Points of Interest (POI)

Information of various facilities (Points Of Interest – POI), such as petrol stations, car parks or restaurants, is available. You can search for a POI by using the “Quick Search” feature, or by selecting the category (or entering the POI name).

Searching for POIs using “Quick Search”

You can quickly find a favourite place by its name. The search is always carried out along the recommended route if it exists or around your current position if no destination is set.


1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Places].

3 Touch [Quick Search Along Route].

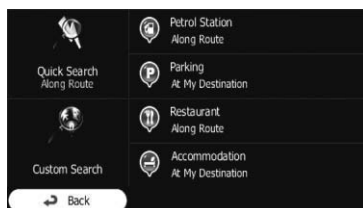

A keyboard screen appears. Start entering the name of the place.

4 After entering a few letters, touch [Results].



The list of places opens with names containing the entered character sequence.

5 Scroll the list and touch the place you want.



A full screen map appears with the selected point in the middle. The name and address of the place is displayed at the top of the screen.

- ➔ For the subsequent operations, refer to *Setting a route to your destination* on page 39.
- ❑ To see the details of the selected place, touch .
- ❑ The places in the list are ordered by their distance from the current or last known position, from the destination or by the length of the necessary detour. To change the order, follow the steps below:
Touch [More], then touch one of the list items.

Searching for POIs using preset categories

The preset search allows you to quickly find the most frequently selected types of POIs.

1 Touch [Menu] on the map screen.

The "Navigation Menu" screen appears.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Places].

The preset search categories are as follows.

- **Petrol Station Along Route:**
 - When the route is set, petrol stations are searched along the route.
 - When the route is not set, they are searched around the current position.
 - When the current position is not available either (no GPS signal), they are searched around the last known position.
- **Parking At My Destination:**
 - When the route is set, car parks are searched along the route.
 - When the route is not set, they are searched around the current position.
 - When the current position is not available either (no GPS signal), they are searched around the last known position.
- **Restaurant Along Route:**
 - When the route is set, restaurants are searched along the route.
 - When the route is not set, they are searched around the current position.
 - When the current position is not available either (no GPS signal), they are searched around the last known position.
- **Accommodation At My Destination:**
 - When the route is set, accommodation is searched around the destination of the route.
 - When the route is not set, they are searched around the current position.
 - When the current position is not available either (no GPS signal), they are searched around the last known position.

Searching for and selecting a location

3 Touch the POI you want.



The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39.

Searching for POIs by categories

You can search for POIs by their categories and subcategories.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Places].

3 Touch [Custom Search].

4 Select the area around which the POIs should be searched for.



- **In a Town:**
Searches for a place within a selected city/town. (The result list will be ordered by the distance from the centre of the selected city/town.)
- **Around Last Known Position:**

Searches around the current position or if it is not available, around the last known position. (The result list will be ordered by the distance from this position.)


- **Around Destination:**

Searches for a place around the destination of the current route. (The result list will be ordered by the distance from the destination.)


- **Along Route:**

Searches along the current route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming petrol stations or restaurants. (The result list will be ordered by the length of the necessary detour.)

- ☐ If you have selected [**In a Town**], select the city/town to search in.

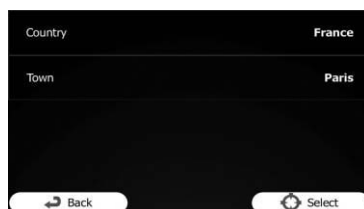


5 Select one of the main place categories (e.g. Accommodation) or touch [List All Places].

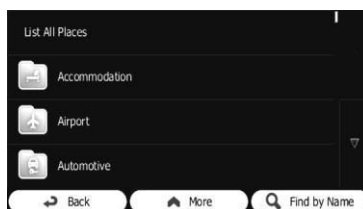


The screen appears showing all places around the selected location or along the route.

6 Select one of the sub place categories (e.g. Hotel or Motel) or touch [List All Places in Accommodation].

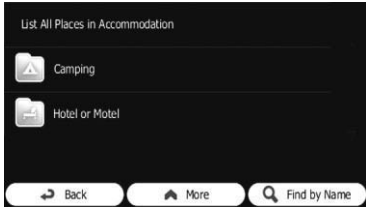

The screen appears showing all places in the selected main category around the selected location or along the route. Sometimes the list of brands in the selected place subcategory appears.

7 Select one brand or touch [List All Places in Accommodation >> Hotel or Motel].

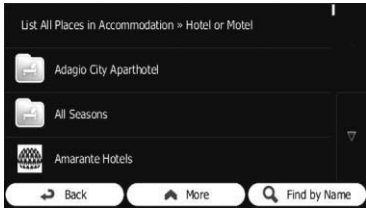

The screen appears showing all places in the selected subcategory around the selected location or along the route. Finally, the results appear in a list.



8 Touch the POI you want.

The searched location appears on the map screen.

➤ For the subsequent operations, refer to *Setting a route to your destination* on page 39. 

Searching for a POI directly from the name of the facilities

You can search for POIs by their names.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

➤ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find], then [Find Places].

3 Touch [Custom Search].

4 Select the area around which the POIs should be searched for.

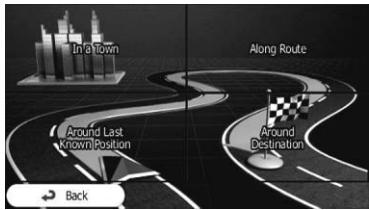

• **In a Town:**

Searches for a place within a selected city/town. (The result list will be ordered by the distance from the centre of the selected city/town.)

• **Around Last Known Position:**

Searches around the current position or if it is not available, around the last known position. (The result list will be ordered by the distance from this position.)

• **Around Destination:**


Searches for a place around the destination of the current route. (The result list will be ordered by the distance from the destination.)

• **Along Route:**

Searching for and selecting a location

Searches along the current route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming petrol stations or restaurants. (The result list will be ordered by the length of the necessary detour.)


- If you have selected [**In a Town**], select the city/town to search in.

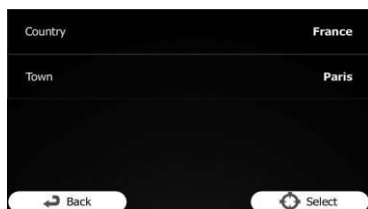

5 Select one of the main place categories (e.g. Accommodation) to search in, or touch [Find by Name] to search among all places.

6 Select one of the place subcategories (e.g. Hotel or Motel) to search in, or touch [Find by Name] to search in the selected place category.

7 Touch [Find by Name] if you have not done it before.

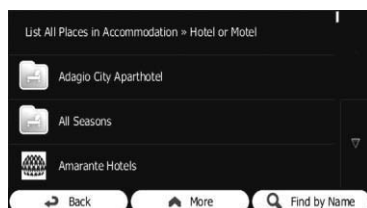

8 Using the keyboard, start entering the name of the place.



9 After entering a few letters, touch [Results].

The screen appears showing the list of places with names containing the entered character sequence.

10 Touch the POI you want.

The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39. □

Searching for a nearby POI

You can search for POIs in your surroundings.

1 Display the map screen.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Map] on the map screen.

- For details, refer to *Customising the quick menu* on page 57.

3 Touch [Where Am I?], then [Help Nearby].



The following preset search categories appear, all for searching around the current position (or around the last known position if the current position is not available).

- **Car Repair Around Here:**
Car repair and roadside assistance services
- **Health Around Here:**
Medical and emergency services
- **Police Around Here:**
Police stations
- **Petrol Station Around Here:**
Petrol stations

4 Touch the desired quick search key.

5 Touch the POI you want.

The searched location appears on the map screen.

- ➔ For the subsequent operations, refer to *Setting a route to your destination* on page 39. 

Selecting a location by using “Find on Map”


1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.


- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find] on the “Navigation Menu” screen.

3 Touch [Find on Map].

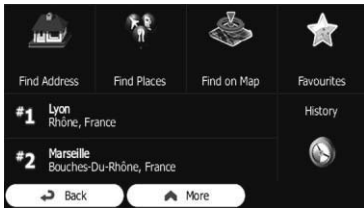

4 Move and scale the map to locate your destination.

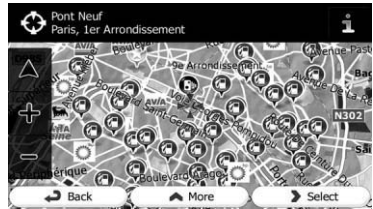

5 Touch [Select].

The selected location appears on the map screen.

- ➔ For details, refer to *Setting a route to your destination* on page 39.
- ❑ You can also select a map location as the destination by scrolling the map.
- ➔ For details, refer to *Searching for a location by scrolling the map* on page 38.
- ➔ For details, refer to *Modifying the route calculation conditions* on page 42. 

Selecting destination from “Favourites”

Storing locations you visit frequently saves time and effort.

Selecting an item from the list provides an easy way to specify the position.

- ❑ This function is not available if no locations have been registered in “Favourites”.
- ➔ For details, refer to *Storing a location in “Favourites”* on page 52.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.


2 Touch [Find] on the “Navigation Menu” screen.

Searching for and selecting a location

3 Touch [Favourites].

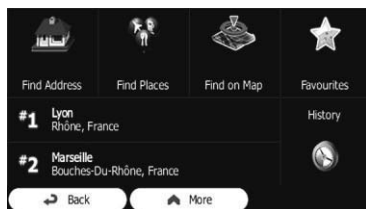

The list of “Favourites” destinations appears.

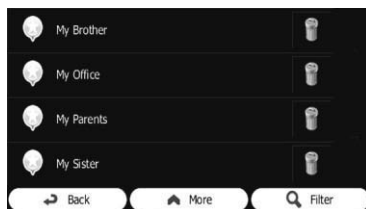

4 Touch the entry you want.

The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39.
- ❑ To see more of the list, browse down or touch [Filter] to enter a few letters from the name of the “Favourites” destination. []

Selecting a location you searched for recently

The places that you have set as destination or waypoint in the past are automatically stored in “History”.

Smart History

Two of the most recently set destinations are shown in the “History” field for easier access.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find] on the “Navigation Menu” screen.

3 Touch [1] or [2] in the “History” field.

The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39.

History

Three most likely destinations are displayed on the first page of the list while the rest of the destinations are ordered by time they were last selected.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [Find] on the “Navigation Menu” screen.

3 Touch [History].

The list of recent destinations appears.

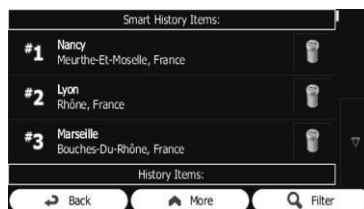

4 Touch the entry you want.

The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on page 39. []

Searching for a location by coordinates

Entering a latitude and longitude pinpoints the location.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.


2 Touch [Find] on the “Navigation Menu” screen.

3 Touch [More], then touch [Coordinate].

4 Enter the latitude and longitude values.



- ❑ You can enter the latitude and longitude values in any of the following formats: Decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.
- ❑ When entering the coordinate in UTM format, touch [More], then [UTM].

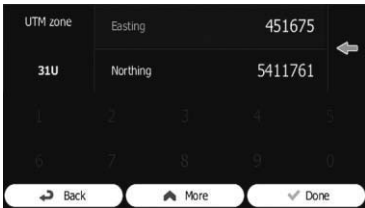

5 When finished, touch [Done].

The searched location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on the next page. ■

Searching for a location by scrolling the map

Specifying a location after scrolling the map enables you to set the position as destination, waypoint.

1 Display the map screen.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch and drag the screen to scroll the map to the position you want.

3 Touch the location that you want to select as your destination.

The cursor appears.

4 Touch [Select].

The selected location appears on the map screen.

- For the subsequent operations, refer to *Setting a route to your destination* on the next page.
- ❑ You can also select a map location as the destination using the “Find on Map” feature.
- For details, refer to *Selecting a location by using “Find on Map”* on page 36. ■

After the location is decided

Setting a route to your destination

You can set a route to your destination by using either a searched location or the “My Route” menu.

Setting a route using a searched location

1 Search for a location.


- ➔ For details, refer to *Searching for and selecting a location* on page 29.

The map screen appears with the selected point in the middle.

2 Touch [Go] to confirm the destination.

After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated.

- ☐ If you have already set the route to the destination, [Next] will appear. Touch [Next] and select the way to modify the current route.
- ➔ For details, refer to *Selecting a new destination when already having a route* on page 48.

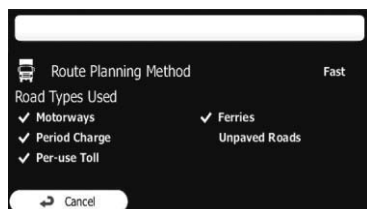

3 Touch [Go!].

Your navigation system starts the route guidance.

- Touch [More] to modify route parameters.

Checking route alternatives when planning the route

You can select from different route alternatives or change the route planning method after you have selected a new destination.

1 Search for a location.

- ➔ For details, refer to *Searching for and selecting a location* on page 29.

The map screen appears with the selected point in the middle.

2 Touch [Go] to confirm the destination.


After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated.

- ☐ If you have already set the route to the destination, [Next] will appear. Touch [Next] and select the way to modify the current route.

3 Touch [More].



4 Touch [Route Alternatives].

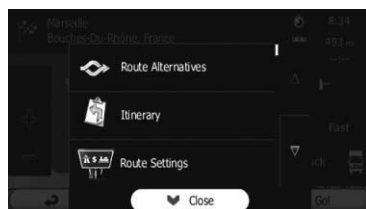

5 Touch any of the alternatives to see it on the map.



If you cannot find a good alternative, touch **[More Results]** and scroll down for routes with different routing methods.

6 Select one of the alternatives and touch **[Back]**.



The previous screen returns. The navigation system calculates the route. The orange line now shows the new recommended route.

Setting a route using the “My Route” menu


1 Touch **[Menu]** on the map screen.

The “Navigation Menu” screen appears.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.


2 Touch **[My Route]** on the “Navigation Menu” screen.

3 Touch **[Create Route]**.

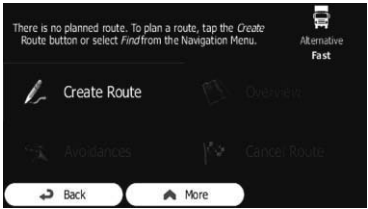

- ❑ The start point of the route, normally it is the current GPS position, is displayed.

4 Touch **+**.

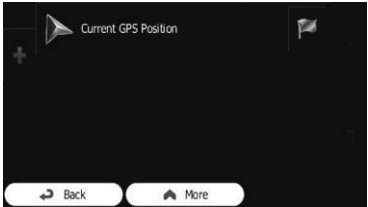

- ❑ When the “Create Route” option is not displayed, touch **[More]** to open a list with more options.

5 Select the destination you want to set.

You can select the destination of the route the same way as described in the previous sections.

- ➔ For details, refer to *Selecting a location you searched for recently* on page 37.

When the new destination is selected, the list returns.




- ❑ To add more destinations, touch **+** where you want to insert the new point in the list, and repeat the above steps.

After the location is decided

6 Touch [Go] to confirm the destination.

After a short summary of the route parameters, the map appears showing the entire route. The route is automatically calculated.

- ❑ If you have already set the route to the destination, **[Next]** will appear. Touch **[Next]** and select the way to modify the current route.
- ➡ For details, refer to *Selecting a new destination when already having a route* on page 48.

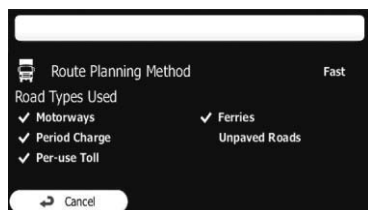

7 Touch [Go!].

Your navigation system starts the route guidance. ❑

Displaying the route overview

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the “Navigation Menu” screen.

3 Touch [Overview].

The current route is displayed in its full length on the map together with additional information and controls. ■

Checking route parameters and accessing route related functions

You can check different parameters of the route recommended by the navigation system.


1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the “Navigation Menu” screen.

The following information is displayed on this screen:

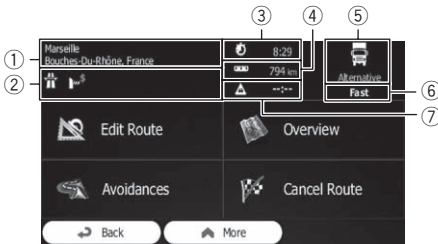

- ① Name and/or address of the destination
- ② Warning icons (if any). They provide extra information about your route (e.g. unpaved roads or toll roads to be taken).
- ③ Total time of the route
- ④ Total length of the route

- ⑤ The symbol of the vehicle type used in route calculation

- ⑥ Route planning method (e.g. **Fast**)

- ⑦ Estimated delay calculated from traffic events on your route

- The following options are available.

- For details, refer to *Registering and editing locations* on page 52.

- **Edit Route:**

Touch this key to add or remove destinations or change their sequence. You can also set a route start point other than your current location. This can be useful to plan and save a future map.

- **Overview:**

Touch this key to display the entire route on the map.

- **Avoidances:**

Touch this key to bypass a part of the route.

- **Cancel Route:**

Touch this key to delete the current route.

- **More:**

Touch this key to open a list with more options like selecting from route alternatives, changing route parameters, simulating the route, saving the current route or loading a previously saved route.

- **Back:**

Touch this key to return to the “Navigation Menu” screen. ■

Modifying the route calculation conditions

You can modify the conditions for route calculation and recalculate the current route.

Changing the vehicle used

You can set the type of vehicle you will use to navigate the route. Based upon this setting, some of the road types can be excluded from the route, or some of the restrictions may not be taken into account in route calculation.

Checking and modifying the current route


1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.


- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Route Settings].

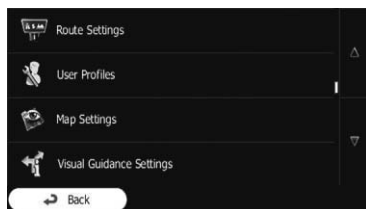

4 Touch [Vehicle], then touch the vehicle type you use.

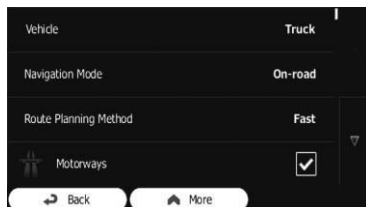

You can select from the following vehicle types:

- ☐ Items marked with asterisk (*) appear only on AVIC-F130.
- **Default Car:**
Manoeuvre restrictions and directional constraints are taken into account when planning a route.
Roads are used only if access for cars is allowed.
Private roads and resident-only roads are used only if they are inevitable to reach the destination.
Walkways are excluded from routes.
- **Default Bus:**
Manoeuvre restrictions and directional constraints are taken into account when planning a route.
Roads are used only if access for buses is allowed.

Private roads, resident-only roads and walkways are excluded from routes.

- **Default Taxi:**
Manoeuvre restrictions and directional constraints are taken into account when planning a route.
Roads are used only if access for taxis is allowed.

Private roads, resident-only roads and walkways are excluded from routes.

- **Default Lorry*:**
Manoeuvre restrictions and directional constraints are taken into account when planning a route.
Roads are used only if access for lorries is allowed.

Private roads, resident-only roads and walkways are excluded from routes.

U-turns are excluded from routes (turning back on a divided road is not considered as a U-turn).

- For details, refer to *Lorry navigation* on page 13.

This system calculates the route optimised for the new vehicle type. The orange line now shows the new recommended route.

Setting the vehicle parameters

You can edit the parameters of the vehicle profile.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.


2 Touch [More...], then [Settings].

3 Touch [Route Settings].


4 Touch [Vehicle].

Checking and modifying the current route

5 Touch  next to the vehicle profile that you want to modify.

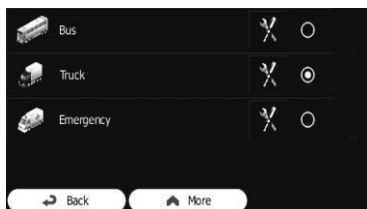

6 Scroll the list and touch any of the lines to change the parameters.

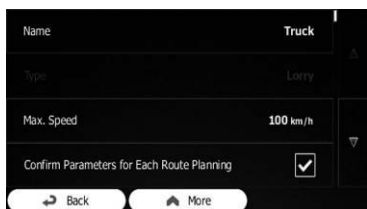

☐ Items marked with an asterisk (*) do not appear when the vehicle type is set to "Default Lorry".

- **Name:**
Touch this key to rename the profile.
- **Fuel Consumption Urban*:**
Enter the average consumption of your vehicle when used in built-up areas. The unit for consumption can be set in "Regional" settings.
- **Fuel Consumption Rural*:**
Enter the average consumption of your vehicle when used on motorways. The unit for consumption can be set in "Regional" settings.
- **Engine Type*:**
Select the engine and fuel type of your vehicle. This helps in estimating the CO₂ emission.
- **Fuel Price*:**
Enter the average fuel price for travel cost calculation. The currency can be set in "Regional" settings.
- **Max. Speed:**

Set the maximum speed you travel with the vehicle.

- **Use Extended Settings:**

Check this box to enable more settings for the following parameters.

- **Length:**
Set the total length of the vehicle.
- **Width:**
Set the width of the vehicle.
- **Height:**
Set the height of the vehicle.
- **Trailer:**
Set if there is a trailer attached to the vehicle.
- **Maximum Allowed Weight:**
Set the maximum allowed weight of the vehicle.
- **Actual Weight:**
Set the actual weight of the vehicle.
- **Freight:**
Select one or more hazard types if the vehicle carries dangerous material.

You can also set the following option:

- **Confirm Parameters for Each Route Planning:**
When enabled, the list of vehicle parameters always appears before route calculation. This helps you quickly adjust the parameters when some of them (actual weight, for instance) often change.

7 When finished modifying an existing vehicle profile, touch [Back].

The settings are completed.

- ☐ While this profile is selected, the parameters of your vehicle are taken into account when planning routes.

For AVIC-F130 users

- ☐ Note that this navigation system leads to a safe route for your lorry only if map data contains the weight, height and etc. restrictions of the road network in your area.
- ☐ Speed limits for lorries may not be available for all roads. It is advised to enter the maximum allowed speed in your area for your vehicle instead of the maximum speed your lorry is capable of.

Checking and modifying the current route

Setting the route calculation

These settings determine how routes will be calculated. Select the type of vehicle you are driving, the road types used in route planning, and the route planning method.

1 Touch [Menu] on the map screen.

The “**Navigation Menu**” screen appears.

- ➡ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Route Settings].

4 Touch the setting item.

- **Navigation Mode:**
On-road navigation creates a turn by turn itinerary using the road network on the map. Switch to off-road navigation to navigate between destinations in a straight line.
- **Route Planning Method:**
The route calculation can be optimised for different situations and vehicle types by changing the planning method.
 - **Fast:**
Calculates a route with the shortest travel time to your destination as a priority. Usually the best selection for fast and normal cars.
 - **Green:**
Calculates a quick but fuel efficient route based on the fuel consumption data given in Route settings. Travel cost and CO₂ emission calculations are estimations only. They cannot take elevations, curves and traffic conditions into account.
 - ❑ This item does not appear when the vehicle profile is set to “**Default Lorry**”.
 - **Short:**
Calculates a route with the shortest distance to your destination as a priority. Usually practical for pedestrians, cyclists or slow vehicles. Searching for a short route regardless of the speed, this

route type is rarely practical for normal vehicles.

- **Economical:**
For vehicle types where “**Green**” routing is not available, this method combines the benefits of “**Fast**” and “**Short**”. This system calculates as if it were calculating the “**Fast**” route, but it takes other roads as well to save fuel.
 - ❑ This item is available for AVIC-F130 only.
- **Easy:**
Results in a route with fewer turns and no difficult manoeuvres. With this option, you can make this system to take, for example, the motorway instead of a series of smaller roads or streets.

Changing road types used

To recalculate the current route with different road type preferences, follow the steps below.

- ❑ To let the route fit your needs, you can also set which road types are to be considered for or to be excluded from the route if possible. Excluding a road type is a preference. It does not necessarily mean total prohibition.
- ❑ If your destination can only be accessed using some of the excluded road types, they will be used but only as much as necessary. In this case a warning icon will be shown on the route parameter, and the part of the route not matching your preference will be displayed in a different colour on the map.
 - ➡ For details, refer to *Checking route parameters and accessing route related functions* on page 42.

1 Touch [Menu] on the map screen.


The “**Navigation Menu**” screen appears.

- ➡ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Route Settings].

4 Touch any of the listed road types.

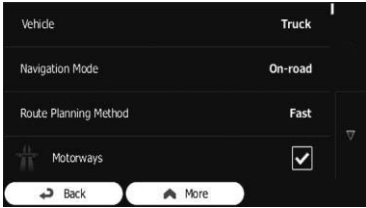

If needed, scroll the list for all road types. The following options can be set for route calculation:

- ☐ Items marked with an asterisk (*) do not appear when the vehicle type is set to "Default Lorry".
- **Motorways:**
Set whether to avoid motorways when you are driving a slow car or you are towing another vehicle.
- **Period Charge:**
Set whether to include the charge road (pay roads) where you can purchase a pass or vignette to use the road for a longer period of time. This option can be enabled or disabled separately from toll roads.
- **Per-use Toll:**
Set whether to include the pay roads where there is a per-use charge. The navigation system includes toll roads by default.
- **Ferries:**
Set whether to include ferries. The navigation system includes ferries by default.
- **Carpool/HOV*:**
Sets whether to include the carpool or HOV lanes. The navigation system excludes carpool or HOV by default.
 - ☐ Carpool or HOV lanes can be used if a given number of passengers are travelling in the vehicle.
- **Unpaved Roads:**
Set whether to include unpaved roads. The navigation system excludes unpaved roads by default.
- **Calculate Green Alternative*:**
If the selected routing method is not "Green", you can have your route compared

to the best green alternative on the screen when confirming the route. If this alternative is much better than the selected method, you can quickly switch to "Green" mode.

5 Touch [Back] to confirm the changes.

The navigation system recalculates the route. The orange line now shows the new recommended route.

Setting the waiting time at waypoints

- ☐ This function is available for AVIC-F130 only.
You can specify a waiting time for each stop on your route which allows the navigation system to estimate a more precise arrival time, and use time restrictions and statistical traffic information en route to your destination.
- ☐ If you enable this feature, your navigation system will ask you to enter the time you will spend at a stopover every time you enter a new destination.

1 Touch [Menu] on the map screen.


The "Navigation Menu" screen appears.

➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Driving Time Management].

4 Touch [Ask for Waiting Time] to enable or disable this option.

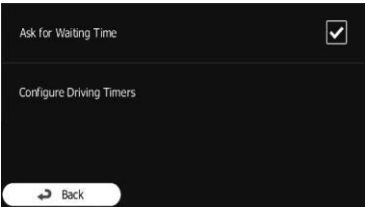

Checking and modifying the current route

5 When finished, touch and hold [Back].

The map screen returns. 

Setting driving time alerts

-  This function is available for AVIC-F130 only.

You can set countdown timers to alert you when you need a break or a sleep. This feature can be set for one driver or two alternative drivers.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.


-  For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Driving Time Management].

4 Touch [Configure Driving Timers].

5 Set the driving timer defaults for the driver.

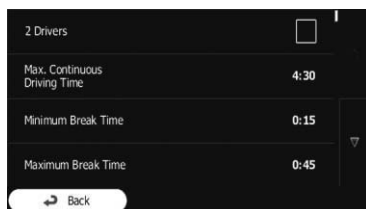

-  You can select [2 Drivers] to use the vehicle with two drivers. The timer defaults are the same but the timers will count down for each driver individually.

6 When finished, touch and hold [Back].

The map screen returns.

Whenever the vehicle stops, the current driver receives a message a few minutes later whether this stop means a break.



When a break is initiated, the continuous driving timer stops and it is reset to its default value, the daily driving timer also stops, and the break time starts counting down (the break starts from the moment when the vehicle stopped). When the vehicle is in motion again, the break timer is reset, and both driving timers start counting down again. 

Modifying the route

When navigation is already started, there are several ways to modify the current route. The following sections describe some of those options.

Selecting a new destination when already having a route

If you already have a recommended route and you select a new destination, the navigation system will ask you whether to start a new route, add a new waypoint to the route or append the newly selected destination at the end of the current route.




- **New Route:**
Touch this key to plan a new route to the newly selected location. The previous destination and waypoint(s) are deleted.
- **Waypoint:**
Touch this key to add the newly selected location as a waypoint to your route. The other destinations of the route remain intact.
 - The new waypoint is placed among destinations to keep the route optimal. To decide where a waypoint to appear, use the **"Edit Route"** menu.
- **Final Destination:**
Touch this key to append the newly selected destination at the end of the route. The other destinations of the route remain intact. The previous final destination is now the last waypoint.

Setting a new starting position for the route

For normal navigation, all routes are planned from the current position. In order to check future routes, simulate them or see their length in time and distance, you can turn off the GPS receiver. Then you can set the starting point of the route to a different location than the current GPS position.

- 1 Touch **[Menu]** on the map screen.
The **"Navigation Menu"** screen appears.
 - For details of the operations, refer to *Screen switching overview* on page 19.
- 2 Touch **[My Route]** on the **"Navigation Menu"** screen.
- 3 Touch **[Edit Route]** when you already have a route.

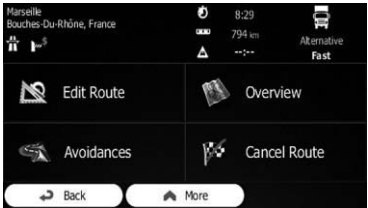


- 4 Touch **[Current GPS Position]** on the first line (normally the current GPS position) and confirm your action on the warning message screen.




Checking and modifying the current route

5 Touch [Set Start Point].

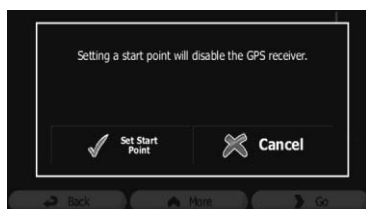

6 Select the start point of the route the same way as you select a destination.

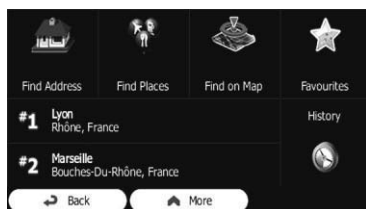

7 Touch [Set Start].

8 Select [Go] when the new start point is set.

The map screen returns with a transparent arrow mark (showing that there is no GPS reception). If the current route already existed, it is now recalculated starting from the selected location.



■ Touch [Turn on GPS].

Normal navigation returns.

- ➞ For details, refer to *Seeing the current position on the map* on page 23. ■

Editing the list of destinations

You can edit the route by modifying the list of destinations. You can add or remove destinations, modify the start position or reorder the list.


1 Touch [Menu] on the map screen.

The "Navigation Menu" screen appears.

- ➞ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the "Navigation Menu" screen.

3 Touch [Edit Route] when you already have a route.

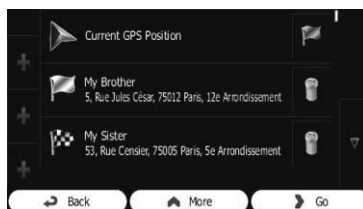

- **+**: Touch this key to add a new destination.
- **-**: Touch this key to delete a destination.
- **P**: Touch this key to modify the start point of the route.
- **More**: Touch this key to reorder the list. You can do it manually or you can let this system optimise the route for you. ■

Cancelling the current route guidance

If you no longer need to travel to your destination, follow the steps below to cancel the route guidance. You can cancel it from either the "Navigation Menu" screen or the map screen.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the “Navigation Menu” screen.

3 Touch [Cancel Route].

The current route is deleted with all its waypoints. ■

Checking route alternatives for the current route

To recalculate the current route with a different route planning method, you can modify the settings for the route calculation (refer to *Checking and modifying the current route* on page 42). There is another way to do this and to compare different route alternatives with the same route planning method.

1 Touch [Menu] on the map screen.

The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the “Navigation Menu” screen.

3 Touch [More].

4 Touch [Route Alternatives].



5 Touch any of the alternatives to see it on the map.



If you cannot find a good alternative, touch [More Results] and scroll down for routes with different routing methods.

6 Select one of the alternatives and touch [Back].



The map screen returns. The navigation system recalculates the route. The orange line now shows the new recommended route. ■

Watching the simulation of the route

You can run a simulated navigation that demonstrates the current route. Follow the steps below.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [My Route] on the “Navigation Menu” screen.

Checking and modifying the current route

3 Touch [More].

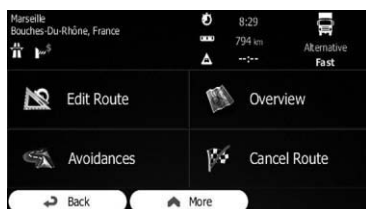

4 Scroll down the list and touch [Simulate Navigation].



The simulation starts from the starting point of the route, and using a realistic speed, it leads you through the whole recommended route.



- During simulation, you can use the following control keys (they disappear after a few seconds but you can open them again by touching the map).

- : Jumps to the previous guidance point (manoeuvre).
- : Pauses the simulation.
- : Jumps to the next guidance point (manoeuvre).
- : 1x

Increases the speed of the simulation to four, eight or 16 times faster. Touching the key again returns to the normal speed.

- Touch [Back].

The simulation stops. □

Navigating in off-road mode

You can switch your navigation to off-road mode. The off-road mode navigates between destinations in a straight line regardless of the road network and traffic regulations.

- 1 Touch [More...], then [Settings].

- 2 Touch [Route Settings].

- 3 Touch [Navigation Mode], then select [Off-road]. □

Storing a location in “Favourites”


Storing your favourite locations as “**Favourites**” provides you with the opportunity to save the time and effort of re-entering this information. “**Favourites**” can include your home location, favourite places, destinations you have already registered and any location on the map.

1 Select a destination.

- ➔ For details, refer to *Searching for and selecting a location* on page 29.


2 When the map screen appears with the selected location in the middle, touch [More].

3 Touch [Add to Favourites].

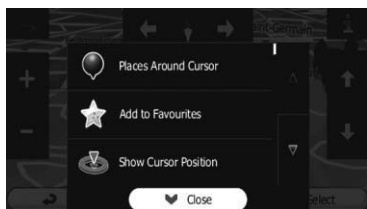

To change the name, use the keyboard. Touch **123** to enter numbers or symbols.

4 Touch [Done].

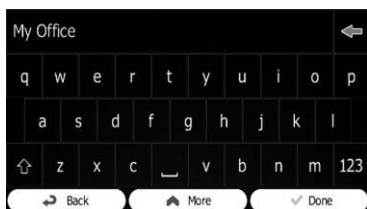

The location is saved as a new “**Favourites**” destination. 

Saving a location as an alert point

Alert points are preloaded in your navigation system. You can also download more from our website, or save any map location as an alert point (a speed camera or a railway crossing, for example).

- ❑ This feature can warn you when you approach one of these points. The following alert types are available:
 - **Audio and Visual:** A sound beeps or announces the type of the alert.
 - **Visual:** The type of the alert point, its distance and the related speed limit appear on the map.
- ➔ For details, refer to *Setting the volume and the guidance voice for navigation system* on page 56.

1 Touch [Menu] on the map screen.

The “**Navigation Menu**” screen appears.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...], then [Settings].

3 Touch [Sound and Warnings].

4 Touch [Alert Point Settings].

5 Touch [Alert Point Warnings], then [Turn On].

6 Scroll the map and select a location.


The cursor appears at the selected point.

7 Touch [More].

8 Scroll down the list and touch [Add Alert Point].

Registering and editing locations

9 Set the necessary parameters.

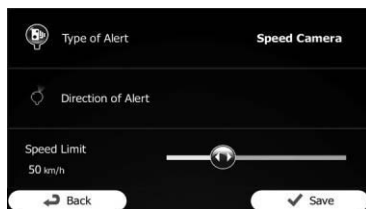

- **Type of Alert:**
Set the type of alert point.
- **Direction of Alert:**
Set the direction from which you expect the alert.
- **Speed Limit:**
Set the speed limit for this alert point (if applicable).

10 Touch [Save].

The location is saved as a new alert point.

- ☐ The warning for road safety cameras (like speed cameras) is disabled when you are in a country where road safety camera warning is prohibited. However, you must ensure on your own liability that using this feature is legal in the country where you intend to use it.

Editing an alert point


You can edit a previously saved alert point (a speed camera or a railway crossing, for example).

1 Scroll the map and select the alert point to edit.


The cursor appears around the alert point.

2 Touch [More].

3 Scroll down the list and touch [Edit Alert Point].

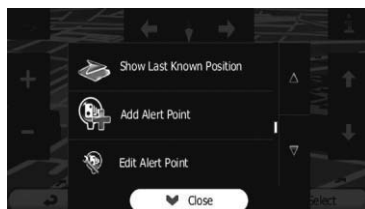

4 Modify the necessary parameters.

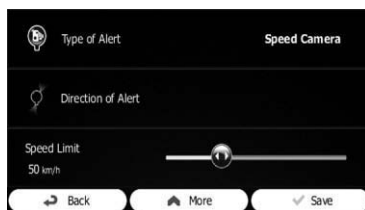

- **Type of Alert:**
Modify the type of alert point.
- **Direction of Alert:**
Modify the direction from which you expect the alert.
- **Speed Limit:**
Modify the speed limit for this alert point (if applicable).

5 Touch [Save].

The changes are saved to the alert point.

- ☐ The warning for road safety cameras (like speed cameras) is disabled when you are in a country where road safety camera warning is prohibited. However, you must ensure on your own liability that using this feature is legal in the country where you intend to use it.

- If you want to use the Traffic information function in Russia, access www.naviextras.com beforehand and activate the service.
- The service activation is subject to fees.

Checking historical traffic information

When this feature is enabled on the “Traffic” settings menu, the navigation system can take the traffic information into account when planning a route. For settings, follow the steps below.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...].

3 Touch [Settings], then [Traffic].

4 Touch [Historical Traffic] and enable the historical traffic data.

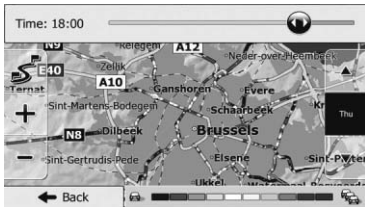

- ☐ When the traffic data is available, a 2D map is displayed with road segments coloured by the density of the traffic in the given period.
- ☐ You can modify the day of week and the time of day to see the desired period.
- ☐ You can disable this feature on public holidays, for example, in order not to take into account normal weekday traffic jams. ☐

Receiving real-time traffic information (TMC)

Traffic Message Channel (TMC) can provide you with the real-time status of the traffic. Your device contains the TMC receiver that is needed to receive traffic incidents (the receiver is enabled by default). If you need to enable the TMC receiver, follow the steps below.

1 Touch [Menu] on the map screen.


The “Navigation Menu” screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...].

3 Touch [Settings], then [Traffic].

4 Touch [Traffic Receiver] and enable the receiver.

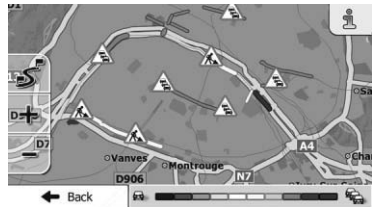

- ☐ When traffic information that may affect your route is received, this system will warn you that it is recalculating the route, and navigation will continue with a new route that is optimal considering the most up-to-date traffic conditions.

To fine-tune this calculation, you can set the minimum delay that can trigger a route recalculation, or you can instruct the software to have you confirm the new recommended route before it takes effect. You can set these in “Traffic” settings.

- For details of the traffic information icons, refer to *Setting the traffic information* on page 58.

Using traffic information

- ❑ When the traffic data is available, a 2D map is displayed with road segments coloured by the severity of traffic incidents. Touch the event type icon at the road segment and then touch  to get information about the traffic incident.
- ❑ TMC is not a global service. It may not be available in your country or region. Ask your local dealer for coverage details.

Checking the traffic incidents on the map

You can check the details of the traffic incidents on the map.

- ❑ Road segments affected by traffic incidents are displayed with an alternate colour on the map, and small symbols above the road show the nature of the incident.
- ❑ A special icon  appears to show you whether traffic incidents are received. The icon shows the status of the traffic receiver when there are no traffic incidents on your route, otherwise it shows the type of the next traffic incident on your route.

1 Touch .

2 Touch [Event List].

The list of traffic incidents appears.

3 Touch any of the list items to see its details, and to display the affected road segment on the map.

If there are traffic incidents on the recommended route that this system has not bypassed, the  icon will open the list of significant traffic incidents to let you quickly check them. .

Displaying the settings screen

1 Touch [Menu] on the map screen.


The "Navigation Menu" screen appears.

- For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...].

3 Touch [Settings].

4 Touch the setting item.

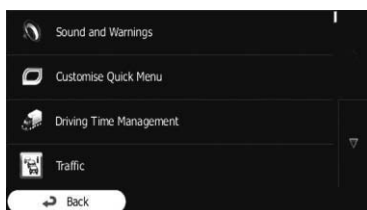

Setting the volume and the guidance voice for navigation system

You can adjust the sound volume, mute your device or change the voice guidance language.

1 Display the settings screen.

- For details of the operations, refer to *Displaying the settings screen* on this page.

2 Touch [Sound and Warnings].

3 Touch the setting item.

- **Volume:**
You can adjust the volume of the following sounds in this system. If you touch this key, a new screen appears where you can set the following sound types and their controls.
 - **Voice:** These controls affect the volume of the guidance sounds (verbal instructions).

- **Ding:** Turn off the attention tone preceding verbal instructions or adjust its volume.

- **Alert Beeps:** These controls affect the volume of the non verbal alert sounds (beeps).

- **Key:** Key sounds provide audible confirmation of either pressing hardware keys or touching the touch panel screen. These controls affect key sounds.

• Voice Language:

Displays the current voice guidance profile. If you touch this key, you can select a new profile from the list of available languages and speakers. Touch any of these to hear a sample voice prompt. Just touch **[Back]** when you have selected the new spoken language.

Different voice profiles are capable of different levels of service:

- **Natural Voice:** These prerecorded sounds can only tell you basic information about turns and distances.
- **TTS Voice:** These computed voices can tell you complex instructions. They can tell you the street names or read out the messages for you.

• Advanced Settings:

You can set this system tries to read the street names in a foreign country, use road numbers in your language or announces the manoeuvre only.

You can also decide whether you want an announcement for distance manoeuvres or it is enough to receive the information when the turn is near.

• Verbosity Level:

You can set the verbosity of the voice instructions: how much they tell and how often they speak.

• Speed Warning Settings:

This system is able to warn you if you exceed the current limit. This information may not be available for your region (ask your local dealer), or may not be fully correct for all roads in the map.

Customising preferences

The maximum speed set in the vehicle profile is also used for this warning. This system alerts you if you exceed the preset value even if the legal speed limit is higher. This setting lets you decide whether you wish to receive visible and/or audible warnings.

Adjust the slider to set the relative speed above which the application initiates the warning.

The following alert types are available:

- **Audio and Visual:** you receive a verbal warning when you exceed the speed limit with the given percentage.
- **Visual:** the current speed limit is shown on the map when you exceed it.

If you prefer to see the speed limit sign on the map all the time (normally it is shown only if your speed exceeds it), you can set it here.

• Alert Point Settings:

This feature allows you to receive a warning when approaching a Road Safety Camera or other alert points like school zones or railroad crossings. You must ensure on your own liability that using this feature is legal in the country where you intend to use it.

You can set the alert for the different alert point categories individually. The following alert types are available:

- **Audio and Visual:** beeps can be played (natural voice) or the type of the alert can be announced (TTS) while you are approaching one of these points, and an extra alert can warn you if you exceed the given speed limit while approaching.
- **Visual:** the type of the alert point, its distance and the related speed limit appear on the map screen while you are approaching one of these cameras.

For some of the alert points, the enforced or expected speed limit is available. For these points, the audio alert can be different if you are below or above the given speed limit.

- **When approaching:** The audio alert is always played when approaching one of these alert points. In order to draw your attention, the alert is different when you exceed the speed limit.
- **Only when speeding:** The audio alert is only played when you exceed the given speed limit.
- **Warning Sign Alerts:**
Maps may contain driver alert information. Touch this key to turn on or off these warnings and to set the distance from the hazard to receive the warning at. These can be set individually for the different warning types. ▣

Customising the quick menu

You can customise the items of the quick menu.

1 Display the settings screen.

- ☞ For details of the operations, refer to *Displaying the settings screen* on the previous page.

2 Touch [Customise Quick Menu].

3 Touch the key from the list that you want to set.

- **Favourites:**
Displays the list of your favourite destinations.
- **Overview:**
Displays a 2D map scaled and positioned to show the entire route.
- **Quick Place Search:**
This function lets you search for a place along your route or around your current location if there is no route calculated.
- **Map Settings:**
Displays the map related settings.
- **Visual Guidance Settings:**
Displays the settings related to route information on the map screen.
- **Traffic:**
Displays the traffic information.

- **Avoid:**
Touching this key lets you bypass parts of the recommended route.
- **Cancel Route:**
Cancels the route and stops navigation. The key is replaced with the next one if way-points are given.
- **Remove Next Waypoint:**
Skips the next waypoint from the route.
- **Trip Monitor:**
Displays the "Trip Monitor" where you can manage your trip logs and track logs that you previously saved.
- **Where Am I?:**
Displays a special screen with information about the current position and a key to search for nearby emergency or roadside assistance services.
- **Create Route/Edit Route:**
Displays the screen for creating a route to the destination or editing the current route.
- **Itinerary:**
Displays the list of manoeuvres (the itinerary).
- **Vehicle Profile:**
Displays the parameters of the selected vehicle profile.
- **Save Route:**
With this function you can save the active route for later use.
- **Load Route:**
With this function you can replace the active route with a previously saved route.
- **History:**
Displays the destinations history list. You can select one of your previous destinations.
- **Route Settings:**
Displays the route related settings.
- **Find Places:**
With this function you can search for Points of Interest in various different ways.
- **Simulate Navigation:**
Displays the map screen and starts simulating the active route.
- **GPS Info:**

Displays the GPS information screen with satellite position and signal strength information.

- **Configure Driving Timers:**
Displays the screen for setting the driving timers.
☐ This item is available for AVIC-F130 only. ☐

Setting the traffic information

The recommended route is not always the same between two points. Whenever suitable data exists, traffic information can be taken into account in the route calculation.

1 Display the settings screen.

- For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Traffic].

3 Touch the setting item.

- **Historical Traffic:**
You can switch to enable or disable historical traffic data and traffic patterns by touching this key. This locally stored information can be very useful in normal circumstances but for example on public holidays it may be better to turn off in order not to take into account normal weekday traffic jams.
- **Traffic Receiver:**
You can set to enable or disable the TMC receiver that can receive real-time traffic information. The following items (Detour, and Event types) are all related to the TMC function and are available only if the receiver is enabled.
- **Detour:**
This setting determines how this system uses the received real-time traffic information in route calculation. When calculating a new route, or when recalculation becomes necessary based on the received traffic events, this system avoids traffic events if it makes sense.

Customising preferences

You can also set the minimum delay that triggers route recalculation, and you can instruct the application if you want to confirm every recalculation.

- **Event Types:**

Touch this key to open the list of traffic event types, and select which events to take into account in route calculation. 

Setting the user profiles

If more drivers use this navigation system, their settings can be remembered by using one of the user profiles.

1 Display the settings screen.

- ➔ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [User Profiles].

3 Touch the key on the right of new profile that you want to set.

- ☐ Rename the profiles so that all users know which profile to use and switch between profiles by touching its name.
- ☐ If you select a new profile, this system restarts so that the new settings can take effect. 

Customising the map screen settings

You can fine-tune the appearance of the map screen.

Adjust the map view to your needs, choose suitable colour themes from the list for both daytime and night use, change the blue arrow to a 3D car model, show or hide 3D buildings, turn track logging on or off, and manage your place visibility settings (which places to show on the map).

1 Display the settings screen.

- ➔ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Map Settings].

The “Map Settings” screen appears.

3 Touch the setting item.

You can see the effect when you change a setting.

- **View Mode:**

Switch the map view between a 3D perspective view and a 2D topdown view.

- **Viewpoint:**

Adjust the basic zoom and tilt levels to your needs. Three levels are available.

- **Automatic Overview:**

When selected, the map zooms out to show an overview of the surrounding area if the next route event (manoeuvre) is far. When you get close to the event, the normal map view returns.

- **Colours:**

Switch between daytime and night colour modes or let the software switch between the two modes automatically a few minutes before sunrise and a few minutes after sunset.

- **Day Map Colour:**

Select the colour scheme used in daytime mode.

- **Night Map Colour:**

Select the colour scheme used in night mode.

- **3D Vehicle Gallery:**

Replace the default position marker to one of the 3D vehicle models.

You can select separate icons for different vehicle types selected for route planning. Separate icons can be used for car, pedestrian and the other vehicles.

- **Landmarks:**

Show or suppress 3D landmarks, 3D artistic or block representations of prominent or well-known objects.

- **Buildings:**

Show or suppress 3D city models, 3D artistic or block representation of full city building data containing actual building size and position on the map.

- **3D Terrain:**

Show or suppress the 3D elevation of the surrounding terrain.

- **Track Logs:**

Turn on or off track log saving, that is, saving the sequence of the locations your journeys go through.

- **Place Markers:**

Select which places to show on the map while navigating. Too many places make the map crowded so it is a good idea too keep as few of them on the map as possible. For this, you have the possibility to save different place visibility settings. You have the following possibilities:

- Touch the checkbox to show or hide the place category.
- Touch the name of the place category to open the list of its subcategories.
- Touch **[More]** to save the current place visibility set or to load a previously saved one. Here you can also revert to the default visibility settings. 

Setting the visual guidance

Adjust how this system helps you navigate with different kinds of route related information on the map screen.

1 Display the settings screen.

- For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Visual Guidance Settings].

3 Touch the setting item.

- **Data Fields:**

The data fields in the corner of the map screen can be customised. Touch this key and select the values you want to see. The values can be different when you navigate a route from when you are just cruising without a given destination. You can select general trip data like your current speed or the altitude, or route data related to your final destination or the next waypoint on your route.

- **Offer Motorway Services:**

You may need a petrol station or a restaurant during your journey. This feature displays a new key on the map when you are driving on motorways. Touch this key to open a panel with the details of the next few exits or service stations. Touch any of them to display it on the map and add it as a waypoint to your route if needed.

- **Facility Types:**

Select the service types displayed for the motorway exists. Choose from the POI categories.

- **Signposts:**

Whenever adequate information is available, lane information similar to the real ones on road signs above the road is displayed at the top of the map. You can turn this feature on or off.

- **Junction View:**

Customising preferences

If you are approaching a motorway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. You can turn this feature on or let the map be displayed for the whole route.

- **Tunnel View:**

When entering tunnels, the surface roads and buildings can be disturbing. This feature shows a generic picture of a tunnel instead of the map. A top-down overview of the tunnel and remaining distance are also displayed.

- **Route Progress Bar:**

Turn on the route progress bar to see your route as a straight line on the left side of the map. The blue arrow represents your current position and moves up as you travel. Waypoints and traffic events are also displayed on the line.

- **Offer Congestion Detour on Highways:**

When you slow down while driving on a motorway, there is a chance that you are in a traffic jam so this system offers you a detour using the next exit. The message shows you distance of the exit and the difference in distance and estimated time compared to the original route. You can choose from one of the following options:

- Touch **[Dismiss]** or just ignore the message if you want to keep the original route.
- Touch **[Preview]** to see the overview of the original route and the detour to make the decision. You can accept the detour as offered or increase the bypassed motorway segment before accepting.
- Turn to the suggested new direction and the route will be automatically recalculated.

- **Offer Real-time Route Alternatives:**

Alternative routes can be suggested when driving on normal roads. This system will select a different turn in the upcoming intersection and offers you a different route

for the next section of the route. But you cannot modify the offered detour.

- **Offer Parking Around Destination:**

Parking at the destination may not be easy in city areas. As you approach the destination, this system can offer parking category places near your destination. Touch this key to open a top-down map with the destination and the offered parking places. Select one and modify the route accordingly.

- **Offer Hints Upon Detour:**

If you leave the recommended route and suddenly exit the motorway, this system offers different alternatives near the exit like petrol stations or restaurants. Also, if there are avoidable parts of the original route ahead (like a tunnel, a toll road or a ferry), you will find them in the list in case you want to bypass them with the help of this system. 

Customising the display settings

Display related settings include menu animations and the brightness of the display.

1 Display the settings screen.

- For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch **[Display]**.

3 Touch the setting item.

- **Menu Animations:**

When animation is turned on, keys on menus and keyboard screens appear in an animated way. Screen transitions are also animated. 

Customising the regional settings

These settings allow you to customise this system for your local language, measurement units, time and date settings and formats, as well as to choose the time zone.

1 Display the settings screen.

- ➔ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Regional].

3 Touch the setting item.

- **Program Language:**
This key displays the current written language of the user interface. By touching the key, you can select a new language from the list of available languages. This system will restart if you change this setting.
- **Units and Formats:**
You can set the distance units to be used by this system. This system may not support all the listed units in some voice guidance languages.
Select between 12 and 24 hours time display and the various international date display formats.
You can also set other country specific units used to display different values in this system.
- **Time Zone:**
By default, time zone is taken from the map information and adjusted by your current location. Here you can set time zone and summer time manually. ☐

Setting the Trip Monitor

Trip logs contain useful information about your trips. Trip logs can be saved manually when you reach your destination or you can turn on the automatic saving here. You can access these logs in the “**Trip Monitor**”. “**Trip**

Monitor” is available from the “**More...**” menu.

1 Display the settings screen.

- ➔ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Trip Monitor].

3 Touch [More], then touch [Trip Monitor Settings].

4 Touch the setting item.

- **Enable Auto-Saving:**
Trip monitor can record statistical data of your trips. If you need these logs later, you can let this system save them automatically for you.
- **Trip Database Size:**
You cannot select this. This line shows the current size of the trip database, the sum of all trip and track logs saved.
- **Save Track Log:**
Track logs, the sequence of the positions given by the GPS receiver, can be saved together with trip logs. They can later be displayed on the map. You can let this system save the track log whenever it saves a trip. ☐

Starting the configuration wizard

Modify the basic software parameters set during the initial setup process.

- ➔ For details, refer to *On first-time startup* on page 17.

1 Display the settings screen.

- ➔ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Start Configuration Wizard].

Customising preferences

3 Select the language that you want to use for voice guidance messages, then touch [Next].

- ❑ Later you can change it in "Sound and Warnings" settings.
- ➞ For details, refer to *Setting the volume and the guidance voice for navigation system* on page 56.

4 If needed, modify the time format and unit settings, then touch [Next].

- ❑ Later you can change it in "Regional" settings.
- ➞ For details, refer to *Customising the regional settings* on the previous page.

5 If needed, modify the default route planning options, then touch [Next].

- ❑ Later you can change them in "Route Settings".
- ➞ For details, refer to *Setting the route calculation* on page 45. 


Resetting to the default settings

Delete all saved data and reset all settings to their factory defaults.

1 Display the settings screen.

- ➞ For details of the operations, refer to *Displaying the settings screen* on page 56.

2 Touch [Reset to Defaults].

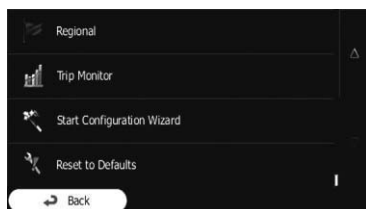

More menu

The “**More...**” menu provides you with various options and additional applications.

1 Touch [Menu] on the map screen.

The “**Navigation Menu**” screen appears.

- ➔ For details of the operations, refer to *Screen switching overview* on page 19.

2 Touch [More...].

3 Touch the desired menu item.

- **Settings:**
You can configure the program settings, and modify the behaviour of the software, fine-tune route planning options, change the look of the map screen, turn on or off warnings, or restart the configuration wizard, etc.
- **Updates and Extras:**
Visit www.naviextras.com to get additional content, such as new maps or 3D landmarks and useful applications.
- **Unit Converter:**
Access travel applications: the unit converter helps you convert between various different international units for temperature, speed, area or pressure, etc.
- **Clothing:**
Access travel applications: the clothing size converter helps you convert between various different international size units for men's or women's cloth types and shoes.
- **Fuel Consumption:**
The Fuel consumption monitor helps you keep track of the consumption of your car even if you do not use navigation for all your journeys. Set the initial odometer value and then record the distance taken and fuel filled in whenever you fill your car. You can also set reminders for regular car maintenance.
- **Sunrise & Sunset:**
Touch this key to see the sunlit and dark areas of the world. Your current location and route points are marked on the map. Touch [Details] to see the exact sunrise and

sunset times for all your route points (your current location, all waypoints and the final destination).

- **Trip Monitor:**
If you save your trip logs when you arrive at some of your destinations or let this system automatically save the trip logs for you, those logs are all listed here. Touch one of the trips to see the trip statistics, speed and altitude profile. If track log has also been saved, you can display it on the map with the selected colour. Track logs can be exported to GPX files for later use.
- **Country Information:**
Select a country from the list and see useful driving information about the selected country. Information may include speed limits on different road types, the maximum blood alcohol level and any compulsory equipment you need to show when stopped by the police.
- **Calculator:**
The scientific calculator helps you in all your calculation needs. Touch [MODE] for additional functions and use the memory to save your results.
- **Help:**
Run the Demo to watch sample route simulations to see how navigation works. The “**About**” section provides you with product information. Read the software and database end user licence agreement, or check the map and other contents of the application. You can also access program usage statistics. ■

Installation

Important safeguards



WARNING

Pioneer does not recommend that you install your navigation system yourself. We recommend that only authorised Pioneer service personnel, who have special training and experience in mobile electronics, set up and install this product. **NEVER SERVICE THIS PRODUCT YOURSELF.** Installing or servicing this product and its connecting cables may expose you to the risk of electric shock or other hazards, and can cause damage to the navigation system that is not covered by warranty.

- Read this manual fully and carefully before installing your navigation system.
- As with any accessory in your vehicle's interior, the navigation system should not divert your attention from the safe operation of your vehicle. If you experience difficulty in operating the system or reading the display, please make adjustments while safely parked. ■

Precautions before connecting the system




CAUTION

- If you decide to perform the installation yourself, and have special training and experience in the mobile electronics installations, please carefully follow all of the steps in the installation manual.
- Secure all wiring with cable clamps or electrical tape. Do not allow any bare wiring to remain exposed.
- Do not directly connect the yellow lead of this product to the vehicle battery. If the lead is directly connected to the battery, engine vibration may eventually cause the insulation to fail at the point where the wire passes from the passenger compartment into the engine compartment. If the yellow lead's insulation tears as a result of contact with metal parts, short-circuiting can occur, resulting in considerable danger.
- It is extremely dangerous to allow cables to become wound around the steering column or gearstick. Be sure to install this product, its cables, and wiring away in such so that they will not obstruct or hinder driving.
- Make sure that the cables and wires will not interfere with or become caught in any of the vehicle's moving parts, especially the steering wheel, gearstick, hand-brake, sliding seat tracks, doors, or any of the vehicle's controls.
- Do not route wires where they will be exposed to high temperatures. If the insulation heats up, wires may become damaged, resulting in a short circuit or malfunction and permanent damage to the product.
- Do not cut the GPS aerial cable to shorten it or use an extension to make it longer. Altering the aerial cable could result in a short circuit or malfunction.
- Do not shorten any leads. If you do, the protection circuit (fuse holder, fuse resistor or filter, etc.) may fail to work properly.
- Never feed power to other electronic products by cutting the insulation of the power supply lead of the navigation system and tapping into the lead. The current capacity of the lead will be exceeded, causing overheating. ■

Before installing this product

- Use this unit with a 12-volt battery and negative earthing only. Failure to do so may result in a fire or malfunction.
- To avoid shorts in the electrical system, be sure to disconnect the (–) battery cable before installation.

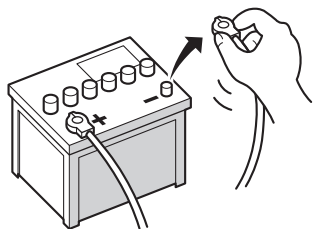

To prevent damage

! WARNING

- **The black lead is earth. Please earth this lead separately from the earth of high-current products such as power amps. Do not earth more than one product together with the earth from another product. For example, you must separately earth any amp unit away from the earth of this navigation system. Connecting earths together can cause a fire and/or damage the products if their earths became detached.**
- **When replacing the fuse, be sure to only use a fuse of the rating prescribed on this product.**
 - When disconnecting a connector, pull the connector itself. Do not pull the lead, as you may pull it out of the connector.
 - This product cannot be installed in a vehicle without ACC (accessory) position on the ignition switch.



ACC position



No ACC position

- To avoid short-circuiting, cover the disconnected lead with insulating tape. It is especially important to insulate all unused speaker leads, which if left uncovered may cause a short circuit.
- Attach the connectors of the same colour to the corresponding coloured port, i.e., blue connector to the blue port, black to black, etc. ■


Precautions before installation



CAUTION

- Never install this product in places where, or in a manner that:
 - Could injure the driver or passengers if the vehicle stops suddenly.
 - May interfere with the driver's operation of the vehicle, such as on the floor in front of the driver's seat, or close to the steering wheel or gearstick.
- Make sure there is nothing behind the dashboard or panelling when drilling holes in them. Be careful not to damage fuel lines, brake lines, electronic components, communication wires or power cables.
- When using screws, do not allow them to come into contact with any electrical lead. Vibration may damage wires or insulation, leading to a short circuit or other damage to the vehicle.
- To ensure proper installation, be sure to use the supplied parts in the manner specified. If any parts are not supplied with this product, use compatible parts in the manner specified after you have the parts' compatibility checked by your dealer. If parts other than supplied or compatible ones are used, they may damage internal parts of this product or they may work loose and the product may become detached.
- It is extremely dangerous to allow cables to become wound around the steering column or gearstick. Be sure to install this product, its cables, and wiring away in such so that they will not obstruct or hinder driving.
- Make sure that leads cannot get caught in a door or the sliding mechanism of a seat, resulting in a short circuit.
- Please confirm the proper function of your vehicle's other equipment after installation of the navigation system.
- Install the navigation system between the driver's seat and front passenger seat so that it will not be hit by the driver or passenger if the vehicle stops quickly.
- Never install the navigation system in front of or next to the place in the dashboard, door, or pillar from which one of your vehicle's airbags would deploy. Please refer to your vehicle's owner's manual for reference to the deployment area of the frontal airbags. ■


Connecting the system

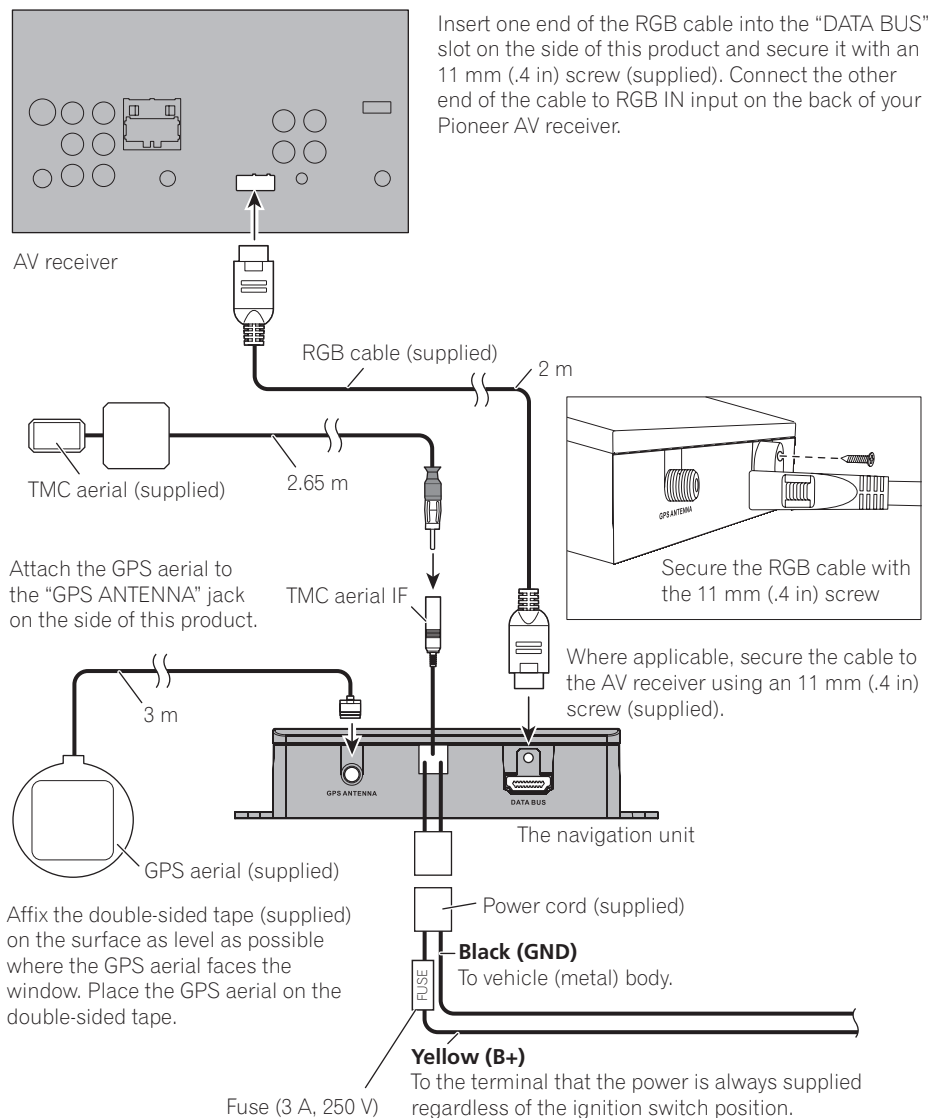

Installation


Installing with the hook and loop fastener

- 1 Thoroughly wipe off both surfaces before affixing the hook and loop fastener.
- 2 Peel off the protective sheet and attach the hook and loop fastener.

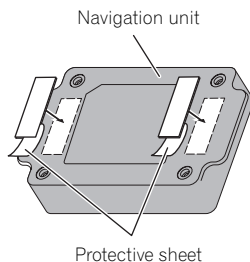

- 3 Decide on the installation position.

- 4 Peel off the other protective sheet and install the navigation unit on the surface of the glove box or similar location.

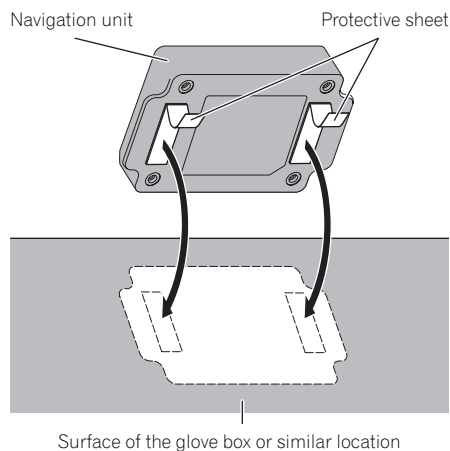


Appendix

Positioning technology

Positioning by GPS

The Global Positioning System (GPS) uses a network of satellites orbiting the Earth. Each of the satellites, which orbit at a height of 21 000 km, continually broadcasts radio signals giving time and position information. This ensures that signals from at least three can be picked up from any open area on the earth's surface.

The accuracy of the GPS information depends on how good the reception is. When the signals are strong and reception is good, GPS can determine latitude, longitude and altitude for accurate positioning in three dimensions. But if signal quality is poor, only two dimensions, latitude and longitude, can be obtained and positioning errors are somewhat greater.

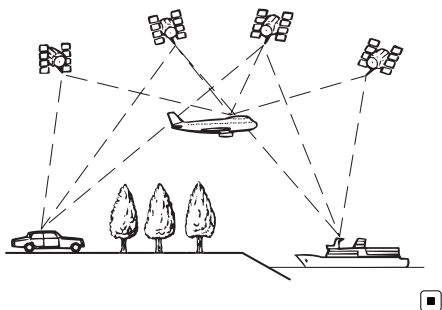


Handling large errors

Positioning errors are kept to a minimum by combining GPS, dead reckoning and map matching. However, in some situations, these functions may not work properly, and the error may become bigger.


When positioning by GPS is impossible

- GPS positioning is disabled if signals cannot be received from more than two GPS satellites.

- In some driving conditions, signals from GPS satellites may not reach your vehicle. In this case, it is impossible for the system to use GPS positioning.

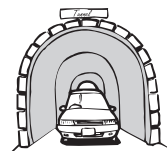

In tunnels or enclosed parking garages

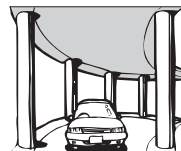

Under elevated roads or similar structures



When driving among high buildings



When driving through a dense forest or tall trees


- If a car phone or mobile phone is used near the GPS aerial, GPS reception may be lost temporarily.
- Do not cover the GPS aerial with spray paint or car wax, because this may block the reception of GPS signals. Snow buildup can also degrade the signals, so keep the aerial clear.
- ❑ If a GPS signal has not been received for a long time, your vehicle's actual position and the current position mark on the map may diverge considerably or may not be updated. In such case, once GPS reception is restored, accuracy will be recovered.

Conditions likely to cause noticeable positioning errors


For various reasons, such as the state of the road you are travelling on and the reception status of the GPS signal, the actual position of your vehicle may differ from the position displayed on the map screen.

Appendix


- If you make a slight turn.

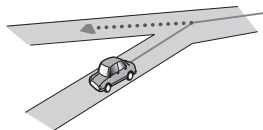


- If there is a parallel road.

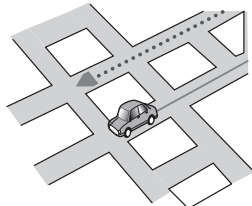


- If there is another road very nearby, such as in the case of an elevated motorway.

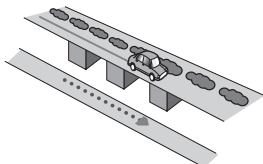


- If you take a recently opened road that is not on the map.

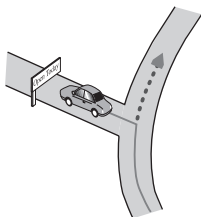


- If you drive in zigzags.

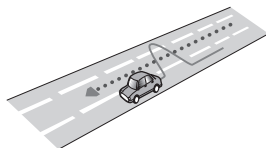


- If the road has a series of hairpin bends.

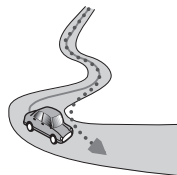


- If there is a loop or similar road configuration.

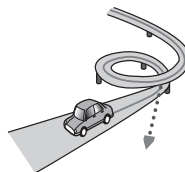


- If you take a ferry.

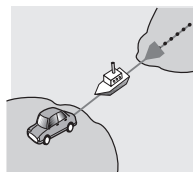

- If you are driving on a long, straight road or a gently curving road.

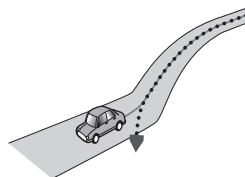


- If you are on a steep mountain road with many height changes.

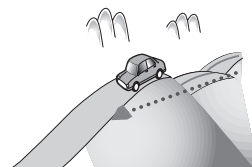


Appendix


- If you enter or exit a multi-storey car park or similar structure using a spiral ramp.

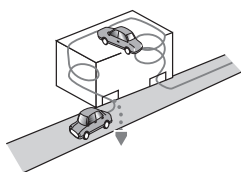


- If your vehicle is turned on a turntable or similar structure.

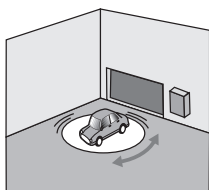


- If trees or other obstacles block the GPS signals for a considerable period.

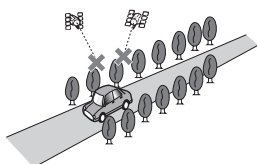


- If you drive very slowly, or in a start-and-stop manner, as in a traffic jam.

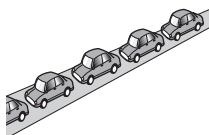

- If you join the road after driving around a large car park.

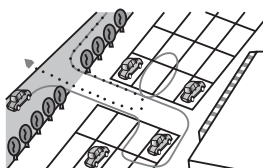

- When you drive around a roundabout.

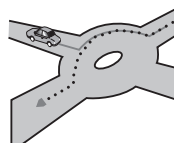

- When starting driving immediately after starting the engine. ■

Route setting information

Route search specifications

Your navigation system sets a route to your destination by applying certain built-in rules to the map data. This section provides some useful information about how a route is set.

CAUTION

When a route is calculated, the route and voice guidance for the route are automatically set. Also, for day or time traffic regulations, only information about traffic regulations applicable at the time when the route was calculated is considered. One-way streets and street closures may not be taken into consideration. For example, if a street is open during the morning only, but you arrive later, it would be against the traffic regulations so you cannot drive along the set route. When driving, please follow the actual traffic signs. Also, the system may not know some traffic regulations.

- The calculated route is one example of the route to your destination decided by the navigation system while taking the type of streets or traffic regulations into account. It is not necessarily an optimum route. (In some cases, you may not be able to set the streets you want to take. If you need to take a certain street, set a waypoint on that street.)

Appendix

- If the destination is too far, there may be instances where the route cannot be set. (If you want to set a long-distance route going across several areas, set waypoints along the way.)
- During voice guidance, turns and intersections from the motorway are announced. However, if you pass intersections, turns, and other guidance points in rapid succession, some may delay or not be announced.
- It is possible that guidance may direct you off a motorway and then back on again.
- In some cases, the route may require you to travel in the opposite direction to your current heading. In such cases, you are instructed to turn around, so please turn around safely by following the actual traffic rules.
- In some cases, a route may begin on the opposite side of a railway or river from your actual current location. If this happens, drive towards your destination for a while, and try route calculation again.
- When there is a traffic jam ahead, a detour route may not be suggested if driving through the traffic jam would still be better than taking the detour.
- There may be instances when the starting point, the waypoint and the destination point are not on the highlighted route.
- The number of roundabout exits displayed on the screen may differ from the actual number of roads.

Route highlighting

- Once set, the route is highlighted in bright colour on the map.
- The immediate vicinity of your starting point and destination may not be highlighted, and neither will areas with particularly complex road layouts. Consequently, the route may appear to be cut off on the display, but voice guidance will continue.

Auto reroute function

- If you deviate from the set route, the system will re-calculate the route from that point so that you remain on track to the destination.
- This function may not work under certain conditions. □

SD and SDHC logo



SD Logo is a trademark of SD-3C, LLC.



SDHC Logo is a trademark of SD-3C, LLC. □

Appendix

Display information

	Page
Find	
Find Address	29
Find Places	31, 33
Find on Map	36
Favourites	36
History	37
Coordinate	37
My Route	
Create Route	40
Edit Route	48, 49
Overview	42
Avoidances	42
Cancel Route	49
More...	
Settings	
Sound and Warnings	56
Customise Quick Menu	57
Driving Time Management	46, 47
Traffic	54, 58
Route Settings	43, 45
User Profiles	59
Map Settings	59
Visual Guidance Settings	60
Display	61
Regional	62
Trip Monitor	62
Start Configuration Wizard	62
Reset to Defaults	63

	Page
More...	
Updates and Extras	
Unit Converter	
Clothing	
Calculator	
Fuel Consumption	64
Sunrise & Sunset	
Trip Monitor	
Country Information	
Help	



Glossary

Current location

The present location of your vehicle; your current location is shown on the map by a blue triangle mark (default).

Destination

A location you choose as the end point of your journey.

Favourites

A frequently visited location (such as your workplace or a relative's home) that you can register to allow easy routing.

GPS

Global Positioning System. A network of satellites that provides navigation signals for a variety of purposes.

Guidance mode

The mode in which guidance is given as you drive to your destination; the system automatically switches to this mode as soon as a route has been set.

Appendix

Guidance point

These are important landmarks along your route, generally intersections. The next guidance point along your route is indicated on the map by the flag icon.

Point Of Interest (POI)

Any of a range of locations stored in the data, such as railway stations, shops, restaurants, and amusement parks.

RDS-TMC

A communication system for informing drivers of the latest traffic information using FM multiplex broadcast. Information such as traffic jams or accidents can be checked on the display.

Route setting

The process of determining the ideal route to a specific location; route setting is done automatically by the system when you specify a destination.

Set route

The route marked out by the system to your destination. It is highlighted in bright colour on the map.

Track log

Your navigation system logs routes that you already passed through if the track logger is activated. This recorded route is called a "track log". It is handy when you want to check a route travelled or if returning along a complex route.

Voice guidance

The giving of directions by navigation voice while in guidance.

Waypoint

A location that you choose to visit before your destination; a journey can be built up from multiple waypoints and the destination. ■

Specifications

General

Rated power source	14.4 V DC (allowable voltage range: 12.0 V to 14.4 V DC)
Earthing system	Negative type
Maximum current consumption	0.21 A
Dimensions (W × H × D):	134 mm × 29 mm × 84 mm
Weight	140 g

GPS receiver

System	L1, C/Acode GPS
Reception system	32 tracking/32 acquisition-channel system
Reception frequency	1 575.42 MHz
Sensitivity	-157.5 dBm (typ)
Position update frequency	Approx. once per second

GPS aerial

Aerial	Micro strip flat aerial/right-handed helical polarisation
Aerial cable	3.0 m
Dimensions (W × H × D)	50.6 mm × 15.5 mm × 50.6 mm
Weight	85 g

SD

Compatible physical format	Version 2.00
Max memory capacity	32 GB
File system	FAT16, FAT32



Note

Specifications and design are subject to possible modifications without notice due to improvements. ■

http://www.pioneer.eu

Visit **www.pioneer.co.uk** (or **www.pioneer.eu**) to register your product.

Visitez **www.pioneer.fr** (ou **www.pioneer.eu**) pour enregistrer votre appareil.

Si prega di visitare il sito **www.pioneer.it** (o **www.pioneer.eu**) per registrare il prodotto.

Visite **www.pioneer.es** (o **www.pioneer.eu**) para registrar su producto.

Zum Registrieren Ihres Produktes besuchen Sie bitte **www.pioneer.de** (oder **www.pioneer.eu**) .

Bezoek **www.pioneer.nl** (of **www.pioneer.eu**) om uw product te registreren.

Посетите **www.pioneer-rus.ru** (или **www.pioneer.eu**) для регистрации приобретенного Вами изделия.

PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

© 2012-2013 PIONEER CORPORATION.
All rights reserved.

Printed in China

<KMZZX> <13B00000>

<127075024473> EU,EW